


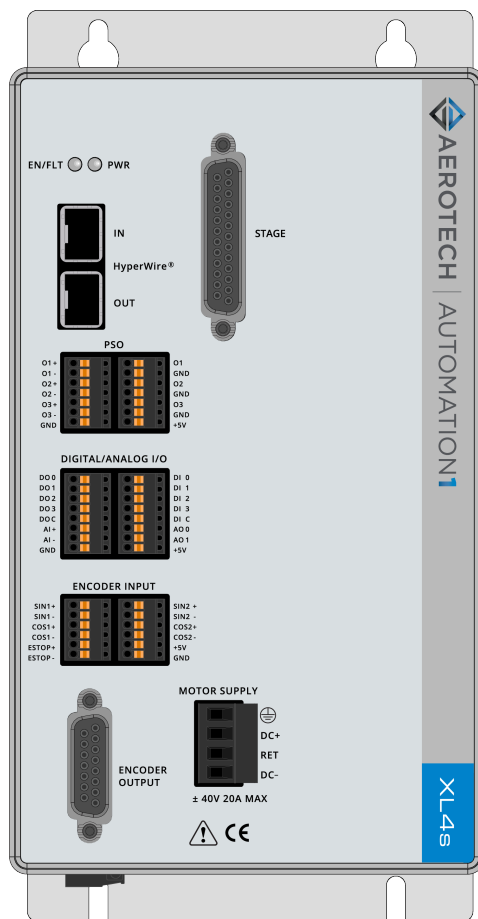

# Automation1 XL4s High-Performance Voice-Coil Drive

## HARDWARE MANUAL

Revision 2.02



## GLOBAL TECHNICAL SUPPORT

Go to the [Global Technical Support Portal](#) for information and support about your Aerotech, Inc. products. The website supplies software, product manuals, Help files, training schedules, and PC-to-PC remote technical support. If necessary, you can complete Product Return (RMA) forms and get information about repairs and spare or replacement parts. To get help immediately, contact a service office or your sales representative. Include your customer order number in your email or have it available before you call.

This manual contains proprietary information and may not be reproduced, disclosed, or used in whole or in part without the express written permission of Aerotech, Inc. Product names mentioned herein are used for identification purposes only and may be trademarks of their respective companies.

Copyright © 2018-2022, Aerotech, Inc., All rights reserved.



## Table of Contents

<b>Automation1 XL4s High-Performance Voice-Coil Drive</b> .....	<b>1</b>
Table of Contents .....	3
List of Figures .....	4
List of Tables .....	5
EU Declaration of Conformity .....	7
Agency Approvals .....	8
Safety Procedures and Warnings .....	9
Handling and Storage .....	11
Installation Overview .....	12
<b>Chapter 1: XL4s Overview</b> .....	<b>13</b>
1.1. Electrical Specifications .....	15
1.2. Mechanical Specifications .....	16
1.2.1. Mounting and Cooling .....	16
1.2.2. Dimensions .....	17
1.3. Environmental Specifications .....	18
1.4. Drive and Software Compatibility .....	18
<b>Chapter 2: Installation and Configuration</b> .....	<b>19</b>
2.1. Input Power Connections .....	19
2.1.1. Control Supply Connector .....	19
2.1.2. Motor Supply Connector .....	20
2.1.3. External Power Supply Options .....	21
2.1.4. Minimizing Noise for EMC/CE Compliance .....	22
2.2. HyperWire Interface .....	23
2.3. Position Synchronized Output Connector .....	24
2.4. Encoder Output Connector .....	25
2.5. Stage Motor and Feedback Connector .....	27
2.5.1. Analog Encoder Inputs .....	28
2.6. Digital and Analog I/O Connectors .....	29
2.6.1. Digital Outputs .....	30
2.6.2. Digital Inputs .....	32
2.6.3. Analog Outputs .....	33
2.6.4. Analog Inputs (Differential) .....	34
2.7. Encoder Input Connectors .....	35
2.7.1. Emergency Stop Sense Input .....	37
2.8. Laser Output Polarity Switch .....	38
2.9. Sync Port .....	39
2.10. PC Configuration and Operation Information .....	39
<b>Chapter 3: Maintenance</b> .....	<b>41</b>
3.1. Preventative Maintenance .....	42
3.2. Board Assembly .....	43
<b>Appendix A: Warranty and Field Service</b> .....	<b>45</b>
<b>Appendix B: Revision History</b> .....	<b>47</b>
<b>Index</b> .....	<b>49</b>

## List of Figures

Figure 1-1: XL4s High Performance Linear Amplifier .....	13
Figure 1-2: Functional Diagram .....	14
Figure 1-3: Dimensions .....	17
Figure 2-1: Control Supply Connections .....	19
Figure 2-2: Motor Supply Connections .....	20
Figure 2-3: Third-Party Power Supply Connection .....	21
Figure 2-4: Control and Motor Power Wiring using a TM3 Transformer .....	22
Figure 2-5: Encoder Outputs Schematic .....	25
Figure 2-6: PSO External Sync Input Schematic .....	26
Figure 2-7: Digital Outputs Connected in Current Sourcing Mode .....	31
Figure 2-8: Digital Outputs Connected in Current Sinking Mode .....	31
Figure 2-9: Digital Inputs Connected to Current Sourcing Devices .....	32
Figure 2-10: Digital Inputs Connected to Current Sinking Devices .....	32
Figure 2-11: Analog Outputs Schematic .....	33
Figure 2-12: Analog Inputs Schematic .....	34
Figure 2-13: Encoder Input Connector Encoder Connections .....	36
Figure 2-14: ESTOP Sense Input Schematic .....	37
Figure 2-15: Laser Output Polarity Switch Location .....	38
Figure 3-1: Control Board Assembly .....	43
Figure 3-2: Power Board Assembly .....	44

## List of Tables

Table 1-1:	Feature Summary .....	13
Table 1-2:	Electrical Specifications .....	15
Table 1-3:	Mounting Specifications .....	16
Table 1-4:	Environmental Specifications .....	18
Table 1-5:	Drive and Software Compatibility .....	18
Table 2-1:	Control Supply Connector Wiring Specifications .....	19
Table 2-2:	Mating Connector Part Numbers for the Control Supply Connector .....	19
Table 2-3:	Motor Supply Wiring Specifications .....	20
Table 2-4:	Mating Connector Part Numbers for the Motor Supply Connector .....	20
Table 2-5:	HyperWire Card Part Number .....	23
Table 2-6:	HyperWire Cable Part Numbers .....	23
Table 2-7:	PSO Connector A Pinout .....	24
Table 2-8:	PSO Connector B Pinout .....	24
Table 2-9:	Mating Connector Part Numbers for the PSO Connectors .....	24
Table 2-10:	PSO Specifications .....	24
Table 2-11:	Encoder Output Connector Pinout .....	25
Table 2-12:	Mating Connector Part Numbers for the Encoder Output Connector .....	25
Table 2-13:	PSO External Sync Specifications .....	26
Table 2-14:	Stage Motor and Feedback Connector Pinout .....	27
Table 2-15:	Mating Connector Part Numbers for the Stage Motor and Feedback Connector .....	27
Table 2-16:	Analog Encoder Input Specifications .....	28
Table 2-17:	Digital and Analog I/O Connector A Pinout .....	29
Table 2-18:	Digital and Analog I/O Connector B Pinout .....	29
Table 2-19:	Mating Connector Part Numbers for the Digital / Analog I/O Connectors .....	29
Table 2-20:	Digital Output Specifications .....	30
Table 2-21:	Digital Output Pins on the Digital/Analog I/O A Connector .....	30
Table 2-22:	Digital Input Specifications .....	32
Table 2-23:	Digital Input Pins on the Digital/Analog I/O B Connector .....	32
Table 2-24:	Analog Output Specifications .....	33
Table 2-25:	Analog Output Pins on the Digital / Analog I/O B Connector .....	33
Table 2-26:	Analog Input Specifications .....	34
Table 2-27:	Analog Input Pins on the Digital / Analog I/O B Connector .....	34
Table 2-28:	Encoder Input Connector Specifications .....	35
Table 2-29:	Encoder Input Connector A Pinout .....	35
Table 2-30:	Encoder Input Connector B Pinout .....	35
Table 2-31:	Mating Connector Part Numbers for the Encoder Input Connector .....	35
Table 2-32:	ESTOP Pins on the Encoder Input Connector .....	37
Table 2-33:	Electrical Noise Suppression Devices .....	37
Table 2-34:	Sync-Related Functions .....	39
Table 2-35:	Sync Port Cables .....	39
Table 3-1:	LED Description .....	41
Table 3-2:	Troubleshooting .....	41
Table 3-3:	Preventative Maintenance .....	42
Table 3-4:	Control Board Fuse Specifications .....	43
Table 3-5:	Power Board Fuse Specifications .....	44

*This page intentionally left blank.*

## EU Declaration of Conformity

**Manufacturer** Aerotech, Inc.  
**Address** 101 Zeta Drive  
Pittsburgh, PA 15238-2811  
USA  
**Product** XL4s  
**Model/Types** All


This is to certify that the aforementioned product is in accordance with the applicable requirements of the following directive(s):

2014/35/EU	Low Voltage Directive
2011/65/EU	RoHS 2 Directive
EU 2015/863	Amendment RoHS 3 Directive


and has been designed to be in conformity with the applicable requirements of the following standard(s) when installed and used in accordance with the manufacturer's supplied installation instructions.

EN 61010-1:2010	Safety Requirements for Electrical Equipment
-----------------	--

**Authorized Representative**

 / Simon Smith, European Director  
Aerotech Ltd  
The Old Brick Kiln, Ramsdell, Tadley  
Hampshire RG26 5PR  
UK

**Engineer Verifying Compliance**

 / Alex Weibel  
Aerotech, Inc.  
101 Zeta Drive  
Pittsburgh, PA 15238-2811  
USA  
1/11/2022

**Date**



## Agency Approvals

Aerotech tested its XL4s drives and found that they obey the standards that follow:

<b>Approval:</b>	CUS NRTL
<b>Approving Agency:</b>	TUV SUD America Inc.
<b>Certificate #:</b>	U8 068995 0031 Rev. 00
<b>Standards:</b>	CAN/CSA-C22.2 No. 61010-1:2012 , EN 61010-1:2010, UL 61010-1:2012

Visit <https://www.tuev-sued.de/product-testing/certificates> to view Aerotech's TÜV SÜD certificates. Type the certificate number listed above in the search bar or type "Aerotech" for a list of all Aerotech certificates.



## Safety Procedures and Warnings



**IMPORTANT:** This manual tells you how to carefully and correctly use and operate the drive.

- Read all parts of this manual before you install or operate the drive or before you do maintenance to your system.
- To prevent injury to you and damage to the equipment, obey the precautions in this manual.
- All specifications and illustrations are for reference only and were complete and accurate as of the release of this manual. To find the newest information about this product, refer to [www.aerotech.com](http://www.aerotech.com).

If you do not understand the information in this manual, contact Aerotech Global Technical Support.



**IMPORTANT:** This product has been designed for light industrial manufacturing or laboratory environments. If the product is used in a manner not specified by the manufacturer:

- The protection provided by the equipment could be impaired.
- The life expectancy of the product could be decreased.

Safety notes and symbols are placed throughout this manual to warn you of the potential risks at the moment of the safety note or if you fail to obey the safety note.



The voltage can cause shock, burn, or death.



You are at risk of physical injury.  
You could damage the drive.



A surface can be hot enough to burn you.



Your actions, the temperature of the system, or the condition of the atmosphere that surround the system could start a fire.



Components are sensitive to electrostatic discharge.



Unsecured cables could cause you to:

- trip and fall
- drag the product off of its mounting location
- damage the cable connections.



A blue circle symbol is an action or tip that you should obey. Some examples include:



- General tip
- Read the manual/section
- Wear protective safety equipment (eye protection, ear protection, gloves)
- If applicable, do not lift unassisted



**DANGER:** To decrease the risk of electrical shock, injury, death, and damage to the equipment, obey the precautions that follow.

1. Before you do maintenance to the equipment, disconnect the electrical power.
2. Restrict access to the drive when it is connected to a power source.
3. Do not connect or disconnect electrical components, wires, and cables while this product is connected to a power source.
4. Wait at least ten (10) minutes after removing the power supply before doing maintenance or an inspection. Otherwise, there is the danger of electric shock.
5. Supply each operator with the necessary protection from live electrical circuits.
6. Make sure that all components are grounded correctly and that they obey the local electrical safety requirements.
7. Install the necessary precautions to supply safety and protection to the operator.



**DANGER:** System travel can cause crush, shear, or pinch injuries. Restrict access to all motor and stage parts while your system is connected to a power source.



**WARNING:** To prevent damage to the equipment and decrease the risk of electrical shock and injury, obey the precautions that follow.

1. Make sure that all system cables are correctly attached and positioned.
2. Do not use the cables or the connectors to lift or move this product.
3. Use this product only in environments and operating conditions that are approved in this manual.
4. Only trained operators should operate this equipment.

## Handling and Storage

### Unpacking the Chassis



**IMPORTANT:** All electronic equipment and instrumentation is wrapped in antistatic material and packaged with desiccant. Ensure that the antistatic material is not damaged during unpacking.

Inspect the shipping container for any evidence of shipping damage. If any damage exists, notify the shipping carrier immediately.

Remove the packing list from the shipping container. Make sure that all the items specified on the packing list are contained within the package.

The documentation for the drive is on the included installation device. The documents include manuals, interconnection drawings, and other documentation pertaining to the system. Save this information for future reference. Additional information about the system is provided on the Serial and Power labels that are placed on the chassis.

The system serial number label contains important information such as the:

- Customer order number (please provide this number when requesting product support)
- Drawing number
- System part number

### Handling



**IMPORTANT:** It is the responsibility of the customer to safely and carefully lift and move the drive.

- Be careful when you move or transport the drive.
- Refer to [Section 1.2. Mechanical Specifications](#) for dimensions and weight specifications.
- Retain the shipping materials for future use.
- Transport or store the drive in its protective packaging.



**WARNING: Electrostatic Discharge (ESD) Sensitive Components!**

You could damage the power supply or drives if you fail to observe the correct ESD practices.

Wear an ESD wrist strap when you handle, install, or do service to the system assembly.

### Storage

Store the drive in the original shipping container. If the original packaging included ESD protective packaging, make sure to store the drive in it. The storage location must be:


- dry
- free of dust
- free of vibrations
- flat

Refer to [Section 1.3. Environmental Specifications](#)

### Installation Overview

This image shows the order in which to make connections and settings that are typical to the XL4s. If a custom interconnect drawing was supplied with your system, that drawing is on your Storage Device and shows as a line item on your Sales Order in the Integration section.

**Figure 1: Installation Connection Overview**

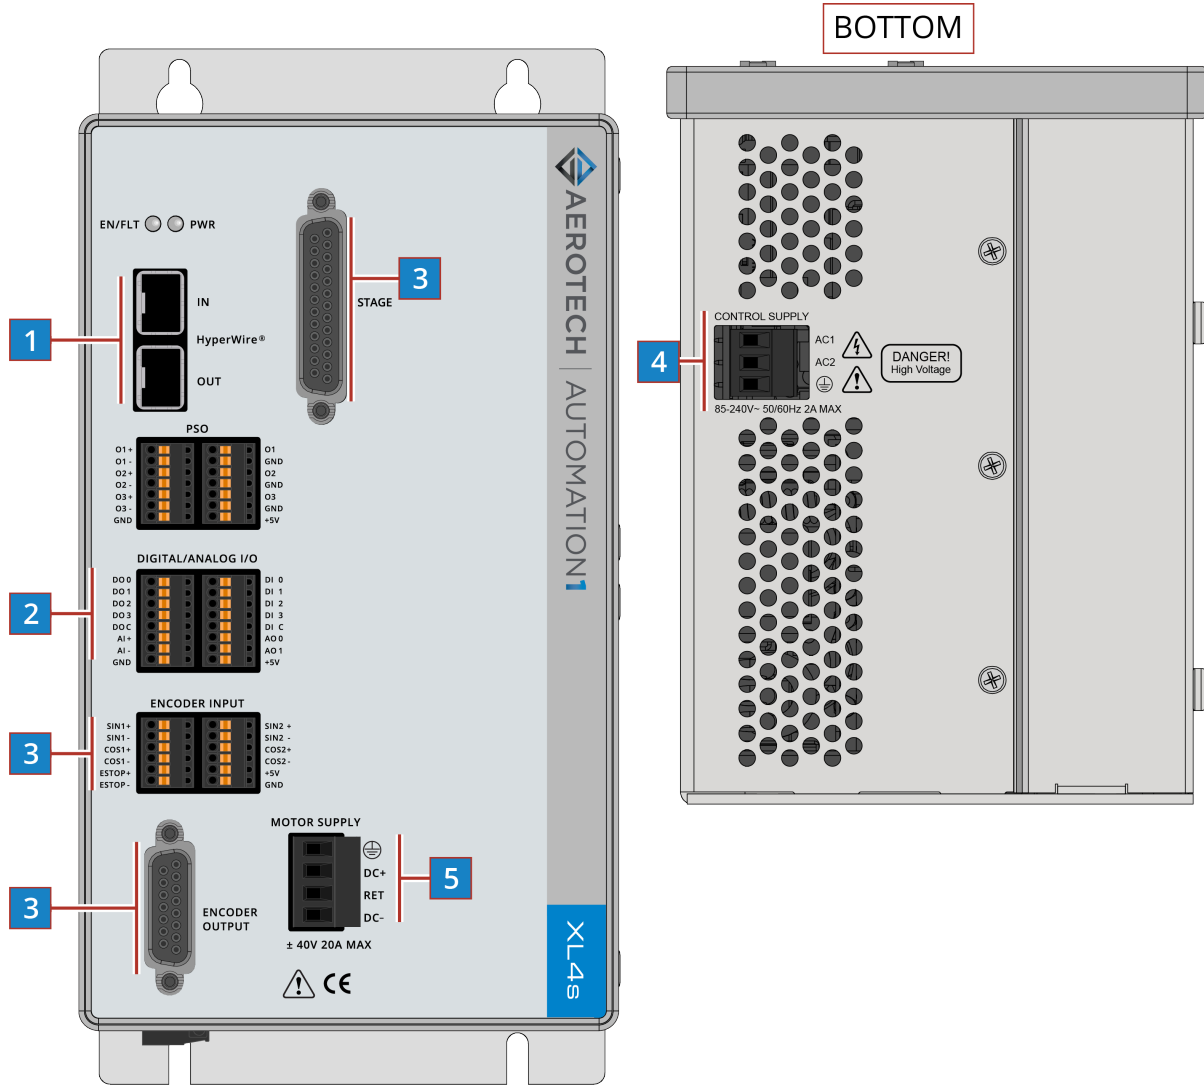


1	Connect a PC HyperWire port to the HyperWire In port.	<a href="#">Section 2.2.</a>
2	Connect the Digital/Analog I/O.	<a href="#">Section 2.6.</a>
3	Connect the Stage motor and feedback connector.	<a href="#">Section 2.5.</a>
4	Connect to the Control Supply connector.	<a href="#">Section 2.1.1.</a>
5	Connect to the Motor Supply connector.	<a href="#">Section 2.1.2.</a>

# Chapter 1: XL4s Overview

The XL4s is a high-performance linear amplifier designed to eliminate the non-linearities common with PWM amplifiers. The drive provides deterministic behavior, auto-identification, and easy software setup.

**Figure 1-1: XL4s High Performance Linear Amplifier**

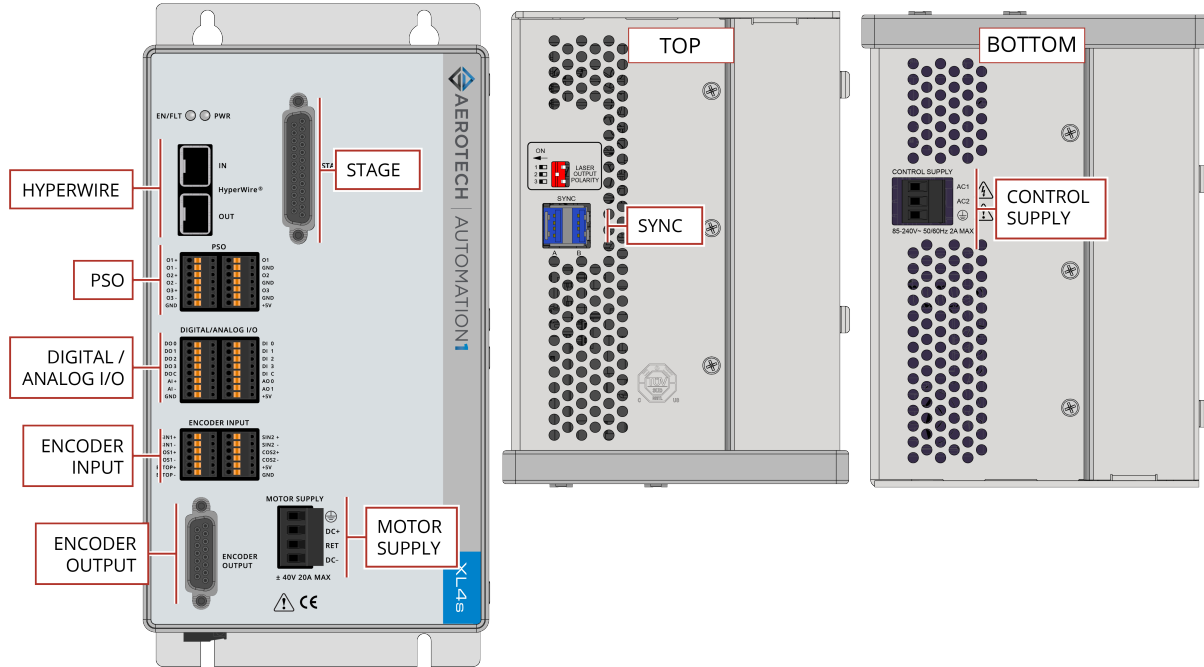


**Table 1-1: Feature Summary**

Standard Features
<ul style="list-style-type: none"> <li>• 85-240 VAC; 50-60 Hz control supply (Section 2.1.1.)</li> <li>• <math>\pm 40</math> VDC max motor supply (Section 2.1.2.)</li> <li>• Two HyperWire ports (Section 2.2.)</li> <li>• Dual-Axis PSO firing (Section 2.3.)</li> <li>• Three-axis Part-Speed PSO firing that uses the PSO firing circuit based off of the commanded vector velocity of up to three axes (refer to the online Help)</li> <li>• Two auxiliary channels of 40 MHz line driver quadrature encoder inputs (Section 2.7.)</li> <li>• Four optically-isolated digital outputs; 5-24V (Section 2.6.1.)</li> <li>• Four optically-isolated digital inputs; 5-24V (Section 2.6.2.)</li> <li>• Two 16-bit single-ended analog outputs; <math>\pm 10</math> V (Section 2.6.3.)</li> <li>• One 16-bit differential analog input; <math>\pm 10</math> V (Section 2.6.4.)</li> <li>• Dedicated 5-24V Emergency Stop sense input (Section 2.7.1.)</li> <li>• Two Sync ports (Section 2.9.)</li> </ul>

The block diagram that follows shows a summary of the connector signals.

**Figure 1-2: Functional Diagram**

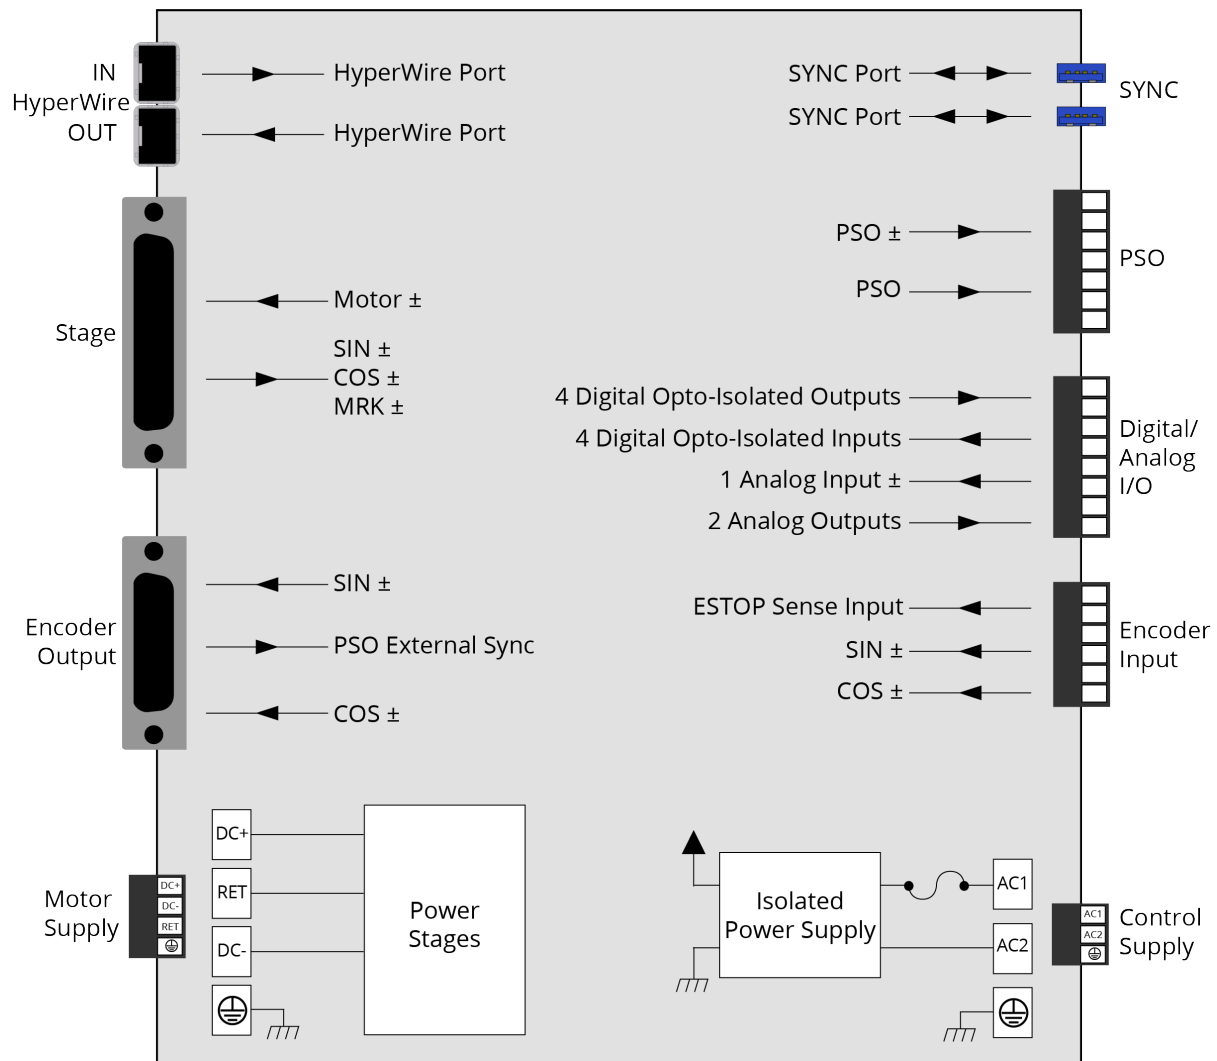

## 1.1. Electrical Specifications

**Table 1-2: Electrical Specifications**

Description		XL4s
Motor Supply	Input Voltage	±40 VDC (max)
	Input Current (continuous)	10 A
Control Supply	Input Voltage	85-240 VAC
	Input Frequency	50-60 Hz
	Inrush Current	16 A
	Input Current	0.35 A (max)
Output Voltage		76 V
Peak Output Current		20 A
Continuous Output Current		5 A
Minimum Load Resistance		0.5 Ω
User Power Supply Output		5 VDC (@ 500 mA)

## 1.2. Mechanical Specifications

### 1.2.1. Mounting and Cooling

Install the drive in an IP54 compliant enclosure to comply with safety standards. Make sure that there is sufficient clearance surrounding the drive for free airflow and for the cables and connections.


**Table 1-3: Mounting Specifications**

		XL4s
Customer-Supplied Enclosure		IP54 Compliant
Weight		~2.9 kg
Mounting Hardware		M4 [#8] screws (four locations, not included)
Mounting Orientation		Vertical (typical)
Dimensions		Refer to <a href="#">Section 1.2.2. Dimensions</a>
Minimum Clearance	Airflow	~25 mm
	Connectors	~100 mm
Operating Temperature		Refer to <a href="#">Section 1.3. Environmental Specifications</a>



### 1.2.2. Dimensions

Figure 1-3: Dimensions

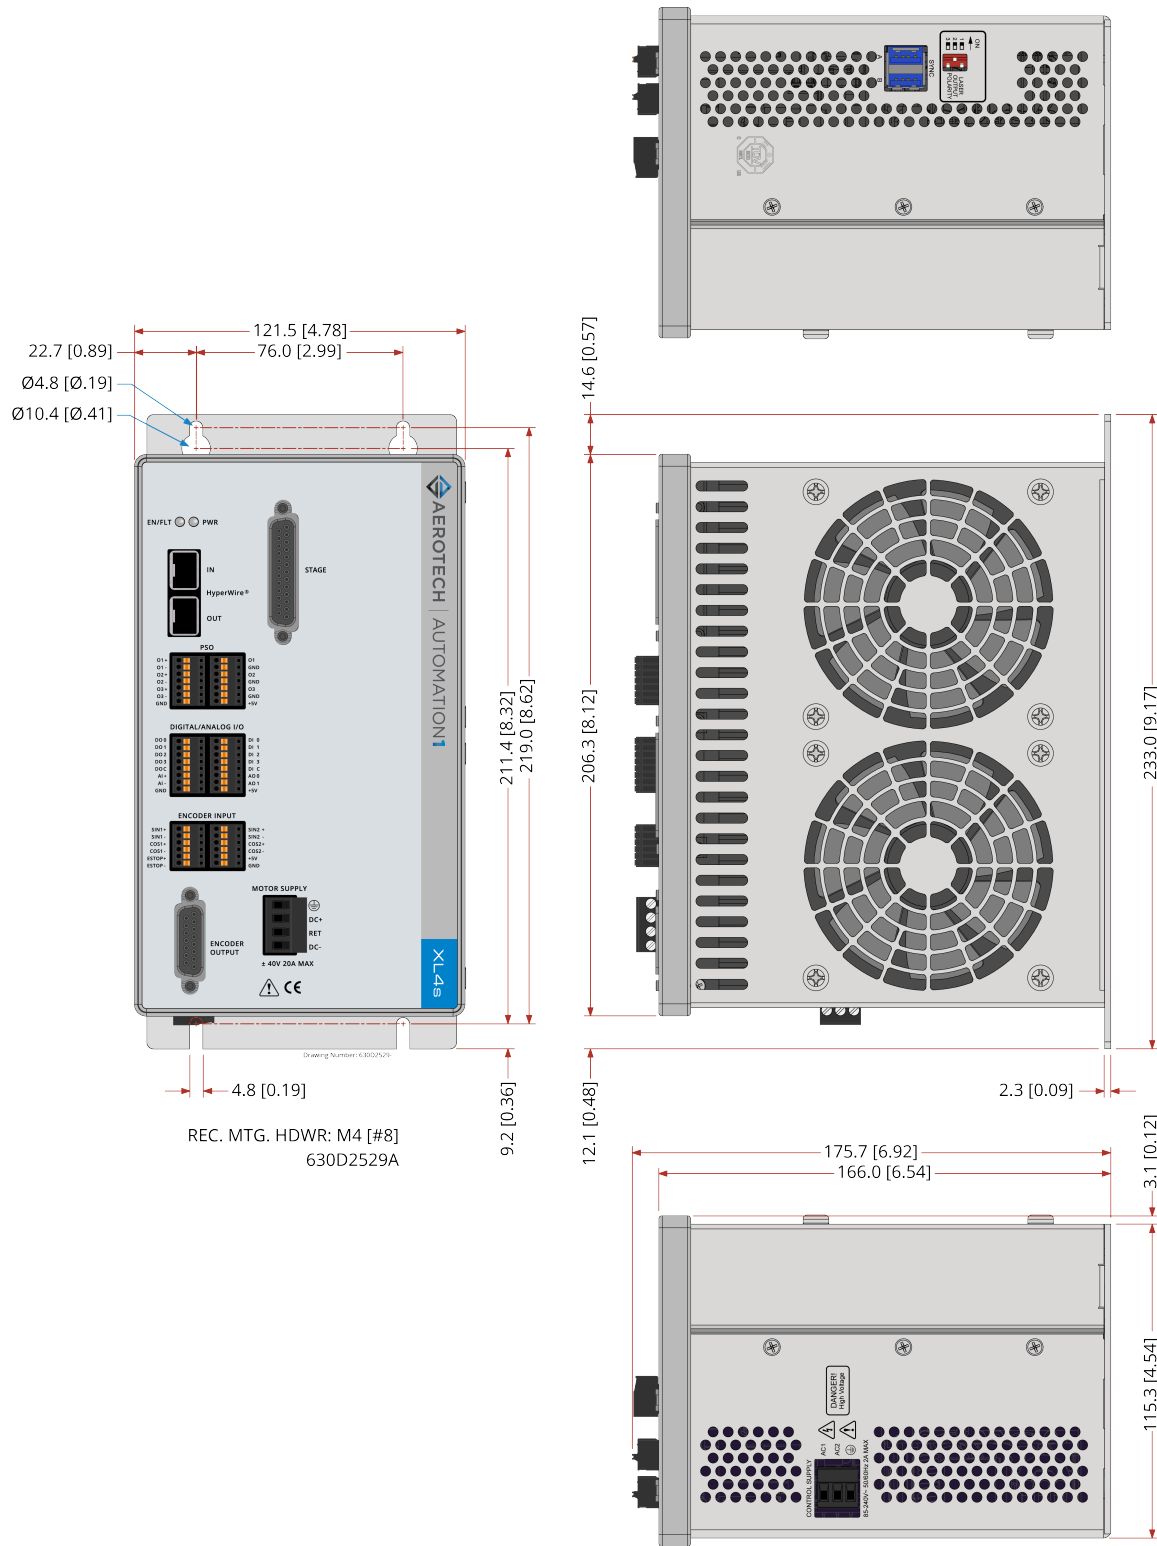

### 1.3. Environmental Specifications

The environmental specifications are listed below.

**Table 1-4: Environmental Specifications**

<b>Ambient Temperature</b>	Operating: 0° to 40°C (32° to 104° F)
	Storage: -30° to 85°C (-22° to 185° F)
<b>Humidity Non-condensing</b>	The maximum relative humidity is 80% for temperatures that are less than 31°C and decreases linearly to 50% relative humidity at 40°C.
<b>Operating Altitude</b>	0 m to 2,000 m (0 ft to 6,562 ft) above sea level. If you must operate this product above 2,000 m or below sea level, contact Aerotech, Inc.
<b>Pollution</b>	Pollution Degree 2 Typically only nonconductive pollution occurs.
<b>Operation</b>	Use only indoors

### 1.4. Drive and Software Compatibility

This table shows the available drives and which version of the software first supported each drive. In the **Last Software Version** column, drives that show a specific version number are not supported after that version.

**Table 1-5: Drive and Software Compatibility**

Drive Type	Software	First Software Version	Last Software Version
XL4s	Automation1	1.2.0	Current
	A3200	6.04	Current

## Chapter 2: Installation and Configuration

The sections in this chapter include details on how to set up the electrical and safety components of your system. Obey all safety warnings, including those in [Safety Procedures and Warnings](#).

### 2.1. Input Power Connections

The drive has two input power connectors. One connector is for AC control power and the other connector is for DC motor power. For a full list of electrical specifications, refer to [Section 1.1](#).

#### 2.1.1. Control Supply Connector



**IMPORTANT:** To operate correctly, this product must have a power supply connected to the Motor Supply and a power supply connected to the Control Supply.

The Control Supply input supplies power to the communications and logic circuitry of the drive. The AC1 input and the AC2 input are connected to fuses inside the drive. Refer to [Table 3-5](#) for fuse values and part numbers.

The Control Supply contains an internal filter. It is not necessary to use an external filter for CE compliance.




**IMPORTANT:** Refer to local electrical safety requirements to correctly size external system wires.



**DANGER:** Before you operate the XL4s, install a ground connection for your safety and to prevent damage to the equipment.

**Figure 2-1: Control Supply Connections**

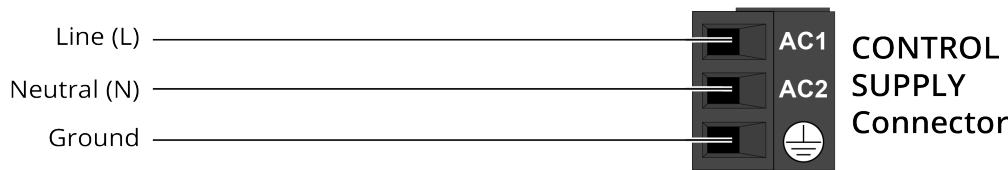

**Table 2-1: Control Supply Connector Wiring Specifications**

Pin	Description	Recommended Wire Size <sup>(1)</sup>
AC1	Line Input: 85 - 240 Volt AC Input Range	1.3 mm <sup>2</sup> [#16 AWG]
AC2	Neutral (0V) or 85 - 240 Volt AC Input Range	1.3 mm <sup>2</sup> [#16 AWG]
	Protective Ground	1.3 mm <sup>2</sup> [#16 AWG]

(1) The wire insulation is rated for 300 V.

**Table 2-2: Mating Connector Part Numbers for the Control Supply Connector**

Type	Aerotech P/N	Third Party P/N	Screw Torque: N·m	Wire Size: mm <sup>2</sup> [AWG]
3-Pin Terminal Block	ECK02388	Phoenix 1756272	0.22 - 0.25	2.5 - 0.05 [14-30]

### 2.1.2. Motor Supply Connector



**IMPORTANT:** To operate correctly, this product must have a power supply connected to the Motor Supply and a power supply connected to the Control Supply.

Motor power is applied to the XL4s at the four terminals of the Motor Supply connector. The DC+ input and the DC- input are connected to fuses inside the drive. Refer to [Table 3-5](#) for fuse values and part numbers.




**IMPORTANT:** Refer to local electrical safety requirements to correctly size external system wires.




**DANGER:** To prevent the risk of electric shock, do not operate the XL4s without a ground connection.

**Figure 2-2: Motor Supply Connections**

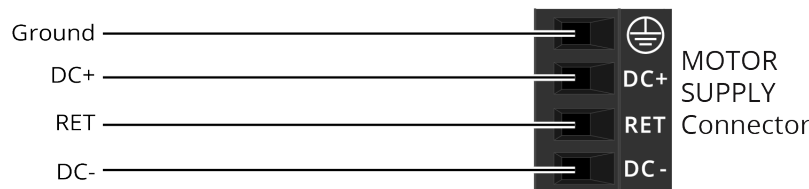

**Table 2-3: Motor Supply Wiring Specifications**

Pin	Description	Recommended Wire Size <sup>(1)</sup>
DC+	+40 VDC Input Range	2.1 mm <sup>2</sup> (#14 AWG)
RET	Return for DC Input	2.1 mm <sup>2</sup> (#14 AWG)
DC-	-40 VDC Input Range	2.1 mm <sup>2</sup> (#14 AWG)
	Protective Ground	2.1 mm <sup>2</sup> (#14 AWG)

(1)The wire insulation is rated for 300 V.

**Table 2-4: Mating Connector Part Numbers for the Motor Supply Connector**

Type	Aerotech P/N	Third Part P/N	Screw Torque: N·m	Wire Size: mm <sup>2</sup> [AWG]
4-Pin Terminal Block	ECK002407	Phoenix 1758843	0.5 - 0.6	3.3 - 0.0516 [12-30]

### 2.1.3. External Power Supply Options


You must connect the Motor Supply to a bipolar power supply. Aerotech recommends that you use an Aerotech TM3 transformer which can supply power to a maximum of four controllers ([Figure 2-4](#)).


As an alternative to a bipolar power supply, you can use two third-party power supplies but they must obey these conditions ([Figure 2-3](#)).

- The output of each power supply must not be ground referenced.
- The output of each power supply must be specified to be used in positive or negative polarity.

The XL4s controller can source 10 A peak current to each motor. This current must be supplied by the external power supply. A switching power supply must be rated for the peak current requirement of the system because the switching power supply might shut down if it is overloaded.

**Figure 2-3: Third-Party Power Supply Connection**

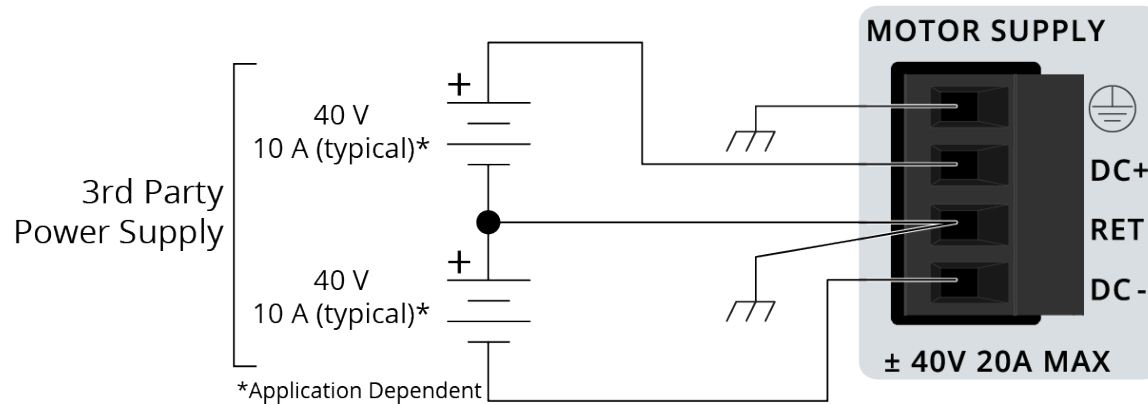

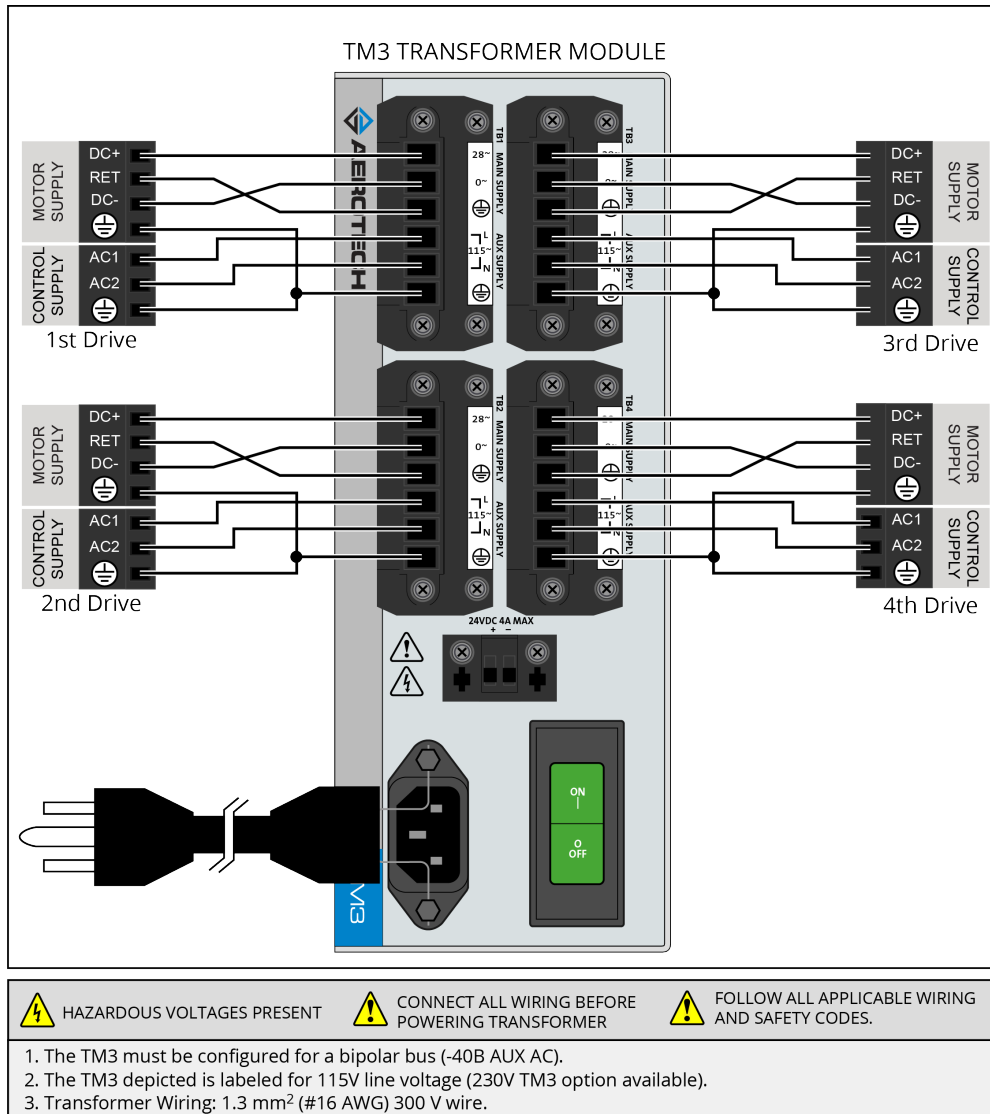**Figure 2-4: Control and Motor Power Wiring using a TM3 Transformer**

## 2.1.4. Minimizing Noise for EMC/CE Compliance



**IMPORTANT:** The XL4s is a component designed to be integrated with other electronics. EMC testing must be conducted on the final product configuration.

To reduce electrical noise, observe the following motor feedback and input power wiring techniques.

1. Separate motor and power wiring from encoder and I/O wiring.
2. Mount drives, power supplies, and filter components on a conductive panel. Mount line filters close to the drive to keep the wire length between the drive and filter to a minimum. Use a line filter, such as Aerotech's UFM-ST, on the Control Supply AC inputs.

The following additional changes could be required for EMC compliance and are recommended during initial EMC system evaluation.

1. Add a clamp-on ferrite to the motor feedback cable close to the drive.  
[Aerotech PN ECZ02348, Fair-rite PN 0446167281]
2. Add a ferrite core to the UFM-ST AC input wires. Wrap the AC wires and ground wire around the core one time.  
[Ferrite core: Aerotech PN ECZ02350, Fair-rite PN 2646102002]

## 2.2. HyperWire Interface

The HyperWire bus is the high-speed communications connection from the controller. It operates at 2 gigabits per second. The controller sends all command and configuration information through the HyperWire bus.

HyperWire cables can be safely connected to or disconnected from a HyperWire port while the PC and/or drive is powered on. However, any changes to the HyperWire network topology will disrupt communication and you must reset the controller to re-establish communication.



**WARNING:** Do not connect or disconnect HyperWire cables while you are loading firmware or damage to the drives may occur.

**Table 2-5: HyperWire Card Part Number**

Part Number	Description
HYPERWIRE-PCIE	HyperWire adapter, PCIe x4 interface

**Table 2-6: HyperWire Cable Part Numbers**

Part Number	Description
HYPERWIRE-AO10-5	HyperWire cable, active optical, 0.5 m
HYPERWIRE-AO10-10	HyperWire cable, active optical, 1.0 m
HYPERWIRE-AO10-30	HyperWire cable, active optical, 3.0 m
HYPERWIRE-AO10-50	HyperWire cable, active optical, 5.0 m
HYPERWIRE-AO10-200	HyperWire cable, active optical, 20.0 m

## 2.3. Position Synchronized Output Connector

Program the Position Synchronized Output (PSO) to generate an output that is synchronized to the feedback position of an axis. PSO is typically used to fire a laser or trigger an external hardware device.


A PSO firing event can be triggered from a feedback channel or from a software trigger. You can get quadrature signals from feedback channels and PSO firing event signals after a PSO firing event occurs. When the PSO generates pulses, minimum latency occurs between the trigger condition and the output.

Aerotech recommends that you use an RS-422 line receiver or an opto-isolator if your system:


- Uses cables with long lengths in work areas where a lot of electrical noise occurs.
- Uses high-frequency pulse transmission.

For best performance, put the RS-422 line receiver or the opto-isolator near the electronics that receive the PSO output pulse.

**Table 2-7: PSO Connector A Pinout**

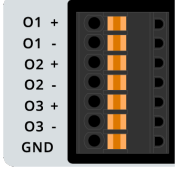Pin #	Label	Description	In/Out/Bi	Connector
1	O1+	PSO Output	Output	
2	O1-	PSO Output	Output	
3	O2+	Reserved	N/A	
4	O2-	Reserved	N/A	
5	O3+	Reserved	N/A	
6	O3-	Reserved	N/A	
7	GND	Ground	N/A	

**Table 2-8: PSO Connector B Pinout**

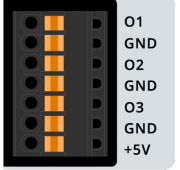Pin #	Label	Description	In/Out/Bi	Connector
1	O1	PSO Output (5V TTL)	Output	
2	GND	Ground	N/A	
3	O2	Reserved	N/A	
4	GND	Ground	N/A	
5	O3	Reserved	N/A	
6	GND	Ground	N/A	
7	+5V	5 Volt Power Supply (500 mA)	Output	

**Table 2-9: Mating Connector Part Numbers for the PSO Connectors**

Type	Aerotech P/N	Third Party P/N	Wire Size: mm <sup>2</sup> [AWG]
7-Pin Terminal Block	ECK02403	Phoenix 1908114	0.5 - 0.080 [20-28]

**Table 2-10: PSO Specifications**

Specification		Value
Maximum PSO Output (Fire) Frequency	TTL	12.5 MHz
	Isolated	5 MHz
Output Latency [Fire event to output change]	TTL	50 ns
	Isolated	150 ns


1. Signals in excess of this rate will cause a loss of PSO accuracy



## 2.4. Encoder Output Connector

The Encoder Output interface echos the encoder signals out of the axis.


**Table 2-11: Encoder Output Connector Pinout**

Pin	Description	In/Out/Bi	Connector
1	SIN-	Output	
2	Reserved	N/A	
3	COS-	Output	
4	Reserved	N/A	
5	Reserved	N/A	
6	Reserved	N/A	
7	PSO External Sync	Input	
8	+5V	Output	
9	SIN+	Output	
10	Reserved	N/A	
11	COS+	Output	
12	Reserved	N/A	
13	Reserved	N/A	
14	Reserved	N/A	
15	Ground	N/A	

**Table 2-12: Mating Connector Part Numbers for the Encoder Output Connector**

Mating Connector	Aerotech P/N	Third Party P/N
15-Pin D-Connector	ECK00100	Amphenol DA15P064TXLF
Backshell	ECK01022	Amphenol 17E-1725-2

**Figure 2-5: Encoder Outputs Schematic**

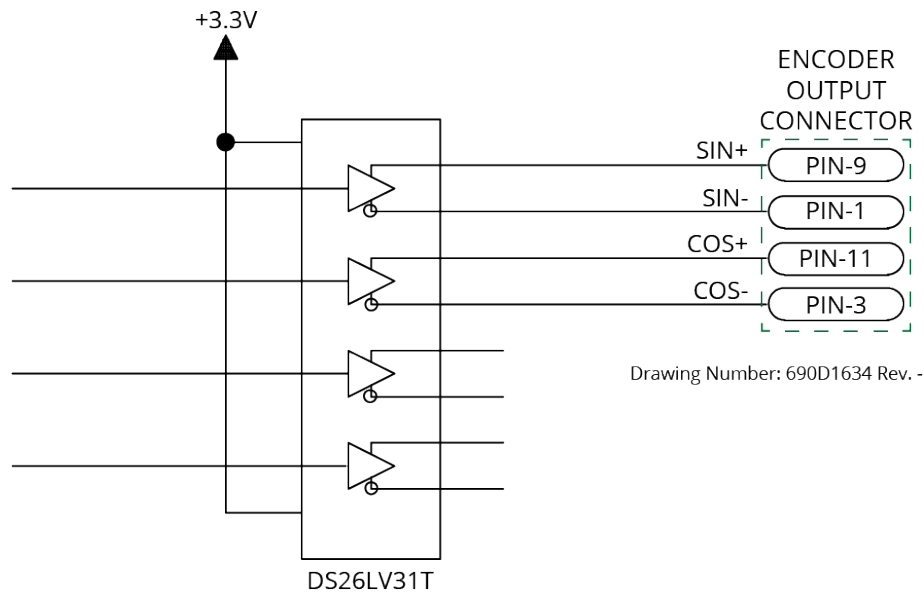


You can use the external [PSO synchronization functions](#) [A3200: PSOOUTPUT PULSE EXTSYNC command] to synchronize waveform generation with an external synchronization signal. When you activate this feature, the PSO Waveform module will not generate the configured waveform when an output event is received until the rising edge of the synchronization signal occurs.

**Table 2-13: PSO External Sync Specifications**

Specification	Value
Voltage	3.3 VDC
Frequency	25 MHz Maximum
On Time	20 ns Minimum


**Figure 2-6: PSO External Sync Input Schematic**

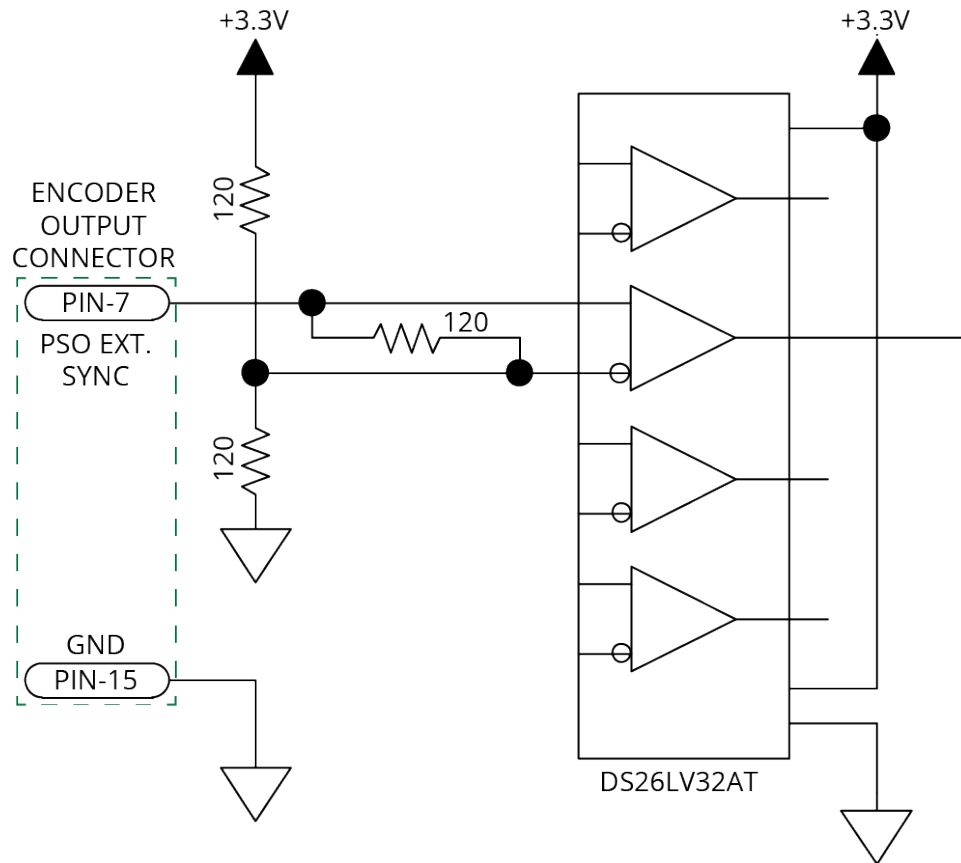

## 2.5. Stage Motor and Feedback Connector

You can only use the XL4s to control a DC Brush motor.

**Table 2-14: Stage Motor and Feedback Connector Pinout**

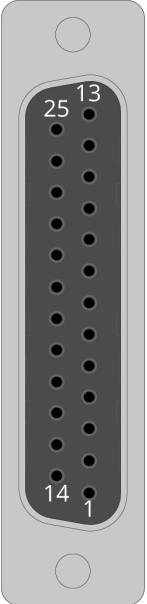Pin	Description	In/Out/Bi	Pin Location
1	Sine +	Input	
2	Cosine +	Input	
3	Encoder Ground	N/A	
4	Reserved	N/A	
5	Reserved	N/A	
6	Reserved	N/A	
7	Marker +	Input	
8	Encoder Power (+5V, 500 mA)	Output	
9	Reserved	N/A	
10	Flash Configuration	Input	
11	Frame Ground	N/A	
12	Motor +	Output	
13	Motor +	Output	
14	Sine -	Input	
15	Cosine -	Input	
16	Encoder Ground	N/A	
17	Reserved	N/A	
18	Reserved	N/A	
19	Reserved	N/A	
20	Marker -	Input	
21	Encoder Ground	N/A	
22	Reserved	N/A	
23	Frame Ground	N/A	
24	Motor -	Output	
25	Motor -	Output	

**Table 2-15: Mating Connector Part Numbers for the Stage Motor and Feedback Connector**

Mating Connector	Aerotech P/N	Third Party P/N
25-Pin D-Connector	ECK00101	FCI DB25P064TXLF
Backshell	ECK00656	Amphenol 17E-1726-2

### 2.5.1. Analog Encoder Inputs

The XL4s has one analog encoder input channel. The XL4s uses this input channel for position feedback.

Use Encoder Tuning [A3200: Feedback Tuning] to adjust the value of the gain, offset, and phase balance controller parameters to get the best performance. For more information, refer to the [Help file](#).

**Table 2-16: Analog Encoder Input Specifications**

Specification	Value
Input Frequency (max)	500 kHz
Input Amplitude <sup>(1)</sup>	0.6 to 1.2 Vpk-pk
Interpolation Factor (max)	262,144
Input Common Mode	1.5 to 3.5 VDC

(1) Any single-ended encoder signal measured with respect to ground.

## 2.6. Digital and Analog I/O Connectors

This connector has four digital, optically-isolated outputs, four digital, optically-isolated inputs, one differential analog input, and two analog outputs.

**Table 2-17: Digital and Analog I/O Connector A Pinout**

Pin #	Label	Description	In/Out/Bi	Connector
1	DO0	Digital Output 0 (Optically-Isolated)	Output	
2	DO1	Digital Output 1 (Optically-Isolated)	Output	
3	DO2	Digital Output 2 (Optically-Isolated)	Output	
4	DO3	Digital Output 3 (Optically-Isolated)	Output	
5	DOC	Digital Output Common	Output	
6	AI+	Analog Input +	Input	
7	AI-	Analog Input -	Input	
8	GND	Ground	N/A	

**Table 2-18: Digital and Analog I/O Connector B Pinout**

Pin #	Label	Description	In/Out/Bi	Connector
1	DI0	Digital Input 0 (Optically-Isolated)	Input	
2	DI1	Digital Input 1 (Optically-Isolated)	Input	
3	DI2	Digital Input 2 (Optically-Isolated)	Input	
4	DI3	Digital Input 3 (Optically-Isolated)	Input	
5	DIC	Digital Input Common	Input	
6	AO0	Analog Output 0	Output	
7	AO1	Analog Output 1	Output	
8	+5V	+5V	Output	

**Table 2-19: Mating Connector Part Numbers for the Digital / Analog I/O Connectors**

Mating Connector	Aerotech P/N	Third Party P/N	Wire Size: mm <sup>2</sup> [AWG]
8-Pin Terminal Block	ECK02397	Phoenix 1908101	0.5 - 0.14 [20-26]

### 2.6.1. Digital Outputs

Optically-isolated solid-state relays drive the digital outputs. You can connect the digital outputs in current sourcing or current sinking mode but you must connect all four outputs in the same configuration. Refer to [Figure 2-7](#) and [Figure 2-8](#).

You must install suppression diodes on digital outputs that drive relays or other inductive devices. To see an example of a current sourcing output that has diode suppression, refer to [Figure 2-7](#). To see an example of a current sinking output that has diode suppression, refer to [Figure 2-8](#).

The digital outputs are not designed for high-voltage isolation applications and they should only be used with ground-referenced circuits.

The digital outputs have overload protection. They will resume normal operation when the overload is removed.


**Table 2-20: Digital Output Specifications**

Digital Output Specifications	Value
Maximum Voltage	24 V (26 V Maximum)
Maximum Sink/Source Current	50 mA/output
Output Saturation Voltage	0.2 V at maximum current
Output Resistance	4 $\Omega$
Rise / Fall Time	250 $\mu$ s (2K pull up to 24V)
Reset State	Output Off (High Impedance State)

**Table 2-21: Digital Output Pins on the Digital/Analog I/O A Connector**

Pin #	Label	Description	In/Out/Bi
1	DO0	Digital Output 0 (Optically-Isolated)	Output
2	DO1	Digital Output 1 (Optically-Isolated)	Output
3	DO2	Digital Output 2 (Optically-Isolated)	Output
4	DO3	Digital Output 3 (Optically-Isolated)	Output
5	DOC	Digital Output Common	Output


**Figure 2-7: Digital Outputs Connected in Current Sourcing Mode**

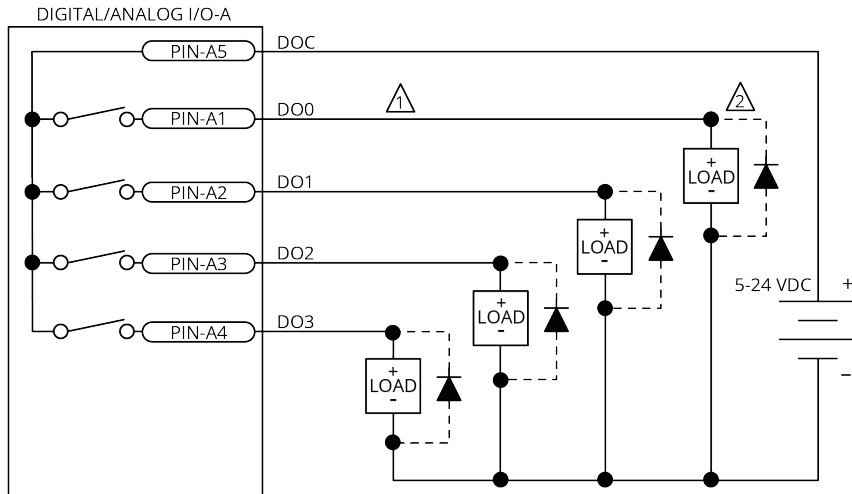

⚠ Each output 50 mA maximum

⚡ Diode required on each output that drives an inductive device (coil), such as a relay.

**Figure 2-8: Digital Outputs Connected in Current Sinking Mode**

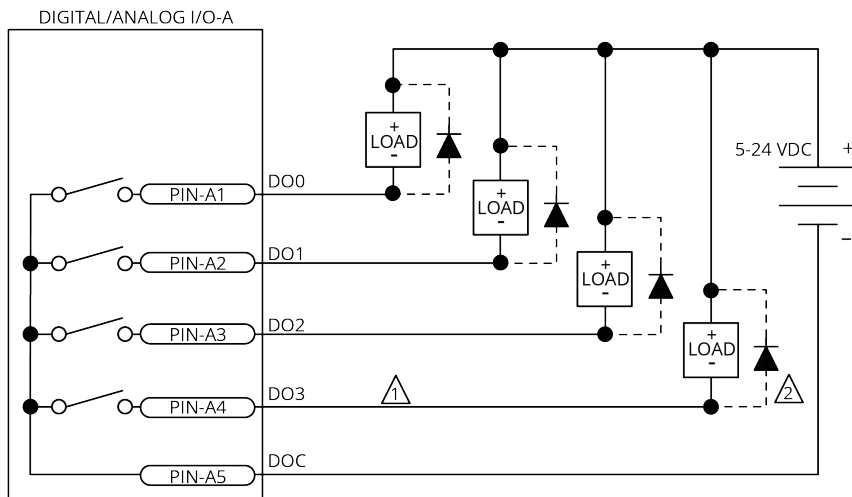

⚠ Each output 50 mA maximum

⚡ Diode required on each output that drives an inductive device (coil), such as a relay.

### 2.6.2. Digital Inputs

You can connect the digital inputs to current sourcing or current sinking devices but you must connect all four inputs in the same configuration. Refer to [Figure 2-9](#) and [Figure 2-10](#). The digital inputs are not designed for high-voltage isolation applications. They should only be used with ground-referenced circuits.


**Table 2-22: Digital Input Specifications**

Input Voltage	Approximate Input Current	Turn On Time	Turn Off Time
+5 V to +24 V	6 mA	10 $\mu$ s	43 $\mu$ s


**Table 2-23: Digital Input Pins on the Digital/Analog I/O B Connector**

Pin #	Label	Description	In/Out/Bi
1	DI0	Digital Input 0 (Optically-Isolated)	Input
2	DI1	Digital Input 1 (Optically-Isolated)	Input
3	DI2	Digital Input 2 (Optically-Isolated)	Input
4	DI3	Digital Input 3 (Optically-Isolated)	Input
5	DIC	Digital Input Common	Input

**Figure 2-9: Digital Inputs Connected to Current Sourcing Devices**

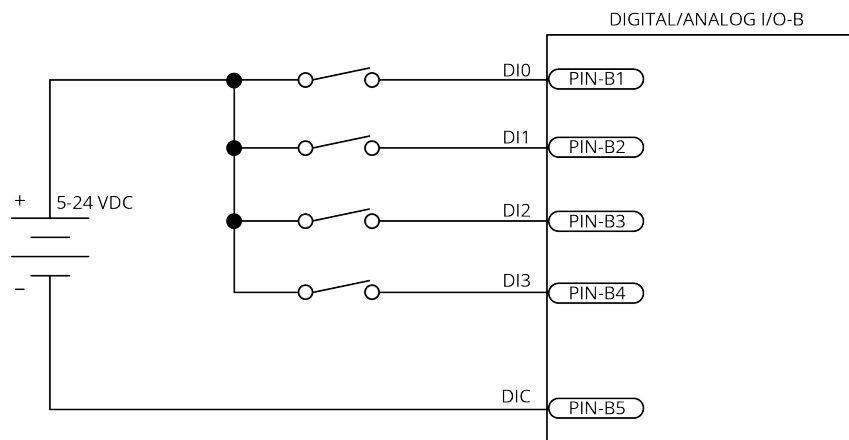

**Figure 2-10: Digital Inputs Connected to Current Sinking Devices**

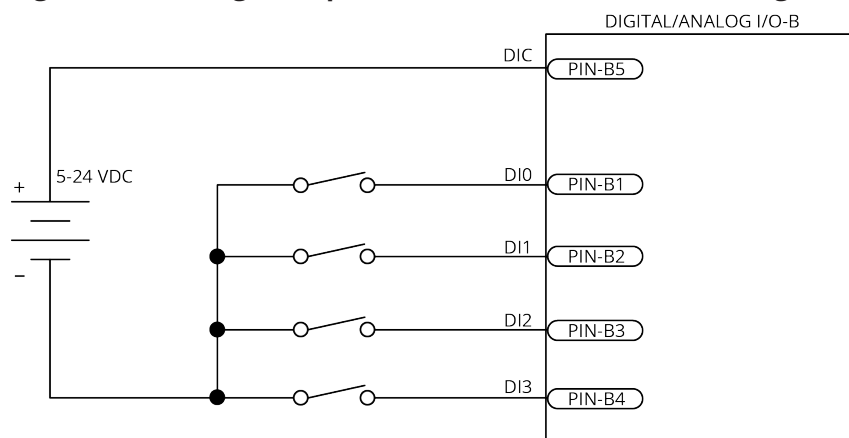



### 2.6.3. Analog Outputs

The analog outputs can be set from within a program or they can be configured to echo the state of select servo loop nodes.

The analog outputs are set to zero when you power on the system or reset the drive.


**Table 2-24: Analog Output Specifications**

Specification	Value
Output Voltage	-10 V to +10 V
Output Current	5 mA
Resolution (bits)	16 bits

**Table 2-25: Analog Output Pins on the Digital / Analog I/O B Connector**

Pin #	Label	Description	In/Out/Bi
6	AO0	Analog Output 0	Output
7	AO1	Analog Output 1	Output

**Figure 2-11: Analog Outputs Schematic**

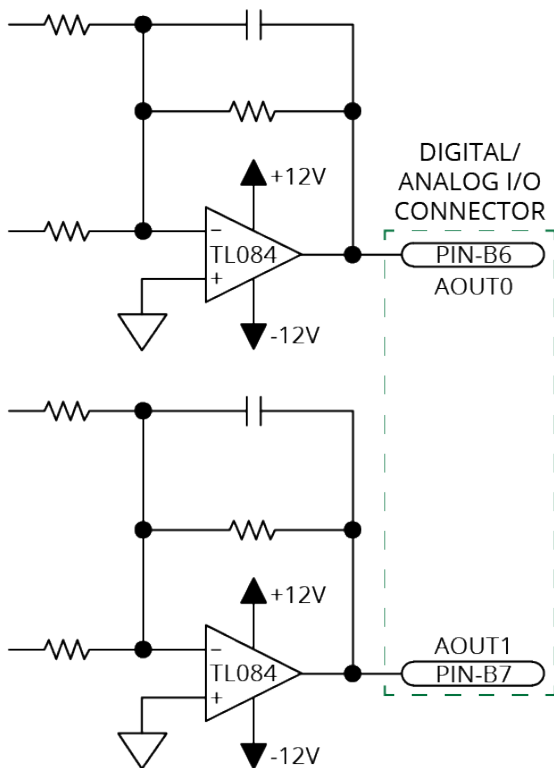

**2.6.4. Analog Inputs (Differential)**

To interface to a single-ended, non-differential voltage source, connect the signal common of the source to the negative input and connect the analog source signal to the positive input. A floating signal source must be referenced to the analog common. Refer to [Figure 2-12](#).


**Table 2-26: Analog Input Specifications**

Specification	Value
(AI+) - (AI-)	+10 V to -10 V <sup>(1)</sup>
Resolution (bits)	16 bits
Input Impedance	1 MΩ
1. Signals outside of this range may damage the input	

**Table 2-27: Analog Input Pins on the Digital / Analog I/O B Connector**

Pin #	Label	Description	In/Out/Bi
6	AI+	Analog Input +	Input
7	AI-	Analog Input -	Input
8	GND	Ground	N/A

**Figure 2-12: Analog Inputs Schematic**

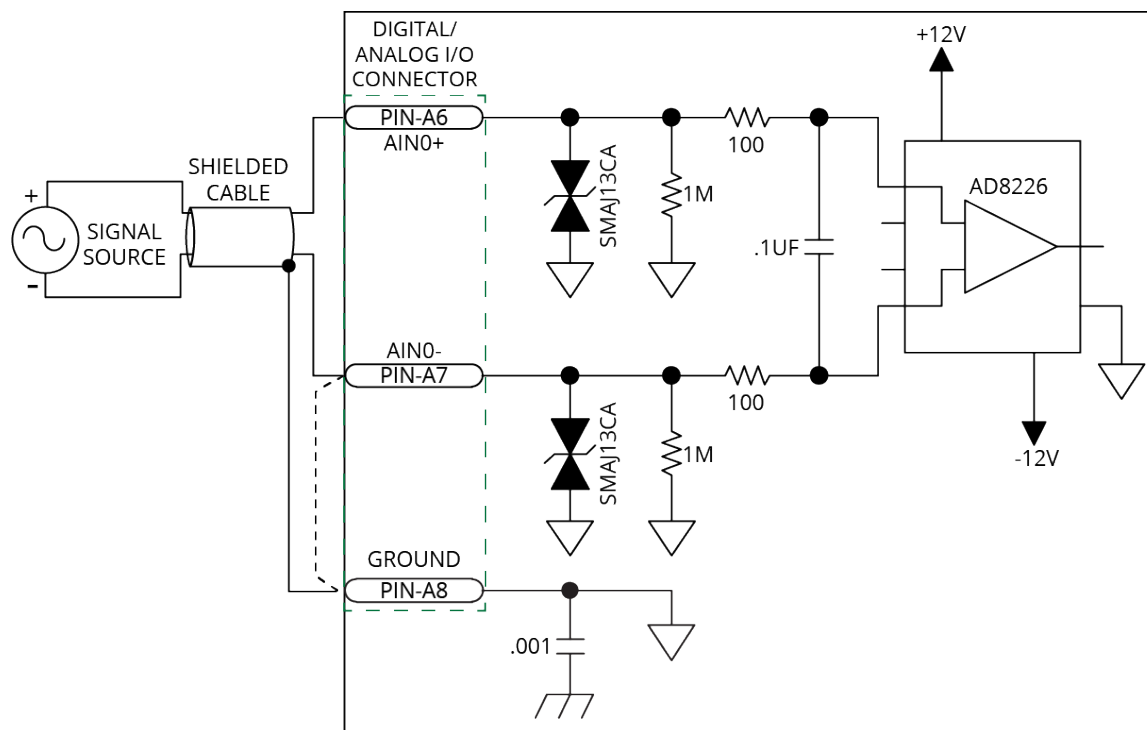


## 2.7. Encoder Input Connectors

The drive has one auxiliary encoder input channel. The encoder interface accepts an RS-422 differential line driver. You cannot use the auxiliary encoder input channels to close the position loop.


**Table 2-28: Encoder Input Connector Specifications**

Specification	Value
Encoder Frequency	10 MHz maximum (25 ns minimum edge separation)
x4 Quadrature Decoding	40 million counts/sec

**Table 2-29: Encoder Input Connector A Pinout**

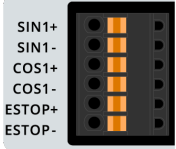Pin	Label	Description	In/Out/Bi	Connector
1	SIN1+	Encoder SIN+ Input	Input	
2	SIN1-	Encoder SIN- Input	Input	
3	COS1+	Encoder COS+ Input	Input	
4	COS1-	Encoder COS- Input	Input	
5	ESTOP+	Emergency Stop Opto-Isolated Input +	Input	
6	ESTOP-	Emergency Stop Opto-Isolated Input -	Input	


**Table 2-30: Encoder Input Connector B Pinout**

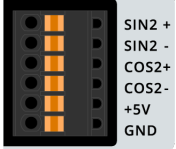Pin	Label	Description	In/Out/Bi	Connector
1	SIN2+	Reserved	N/A	
2	SIN2-	Reserved	N/A	
3	COS2+	Reserved	N/A	
4	COS2-	Reserved	N/A	
5	+5V	+5V Encoder Power	Output	
6	GND	Ground	N/A	

**Table 2-31: Mating Connector Part Numbers for the Encoder Input Connector**

Type	Aerotech P/N	Third Party P/N	Wire Size: mm <sup>2</sup> [AWG]
6-Pin Terminal Block	ECK02405	Phoenix 1704755	0.5 - 0.14 [20-26]

Figure 2-13: Encoder Input Connector Encoder Connections

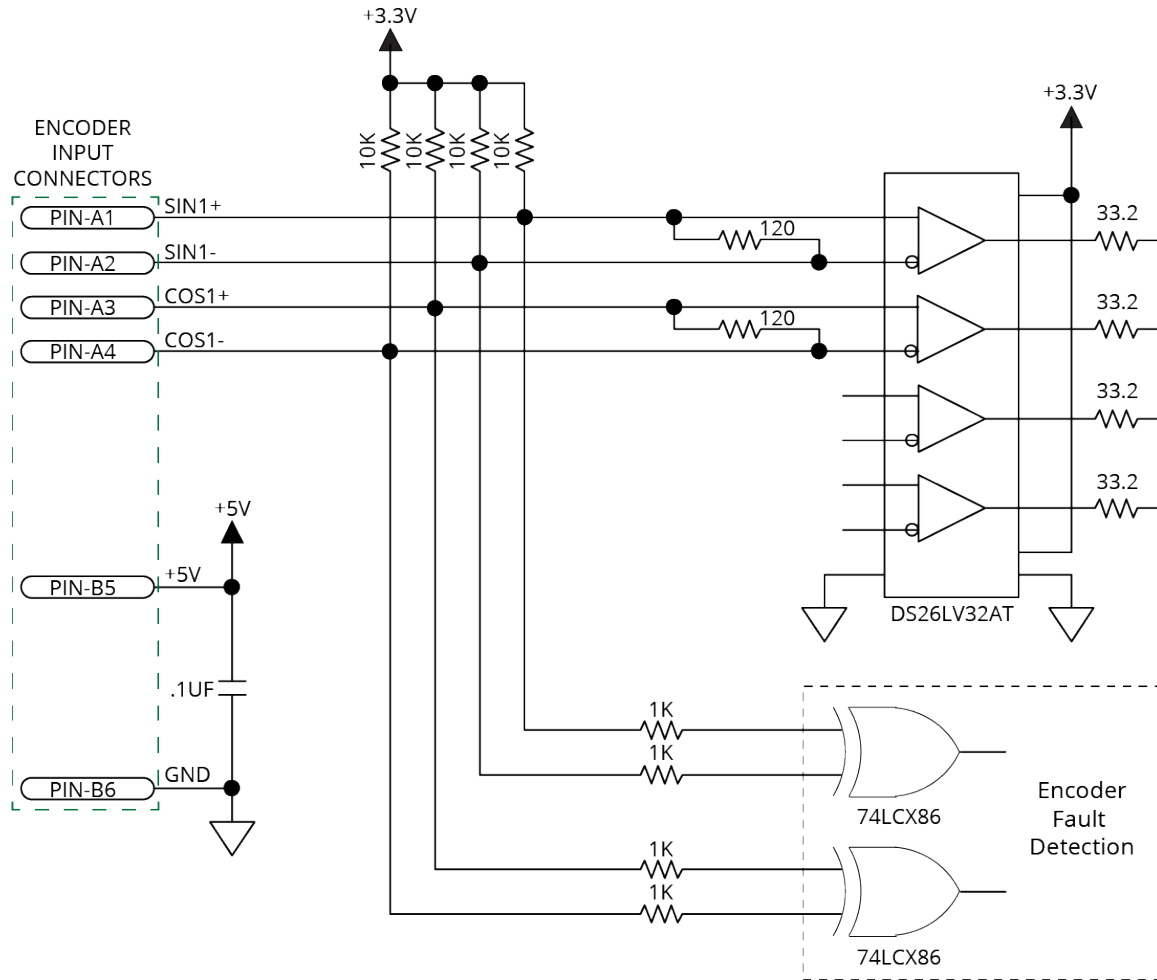

### 2.7.1. Emergency Stop Sense Input



**WARNING:** It is your responsibility to assemble the external safety circuits of your system to minimize the risk to the operator.




**IMPORTANT:** The ESTOP sense input is not a safety-rated system.

Use the ESTOP sense input to monitor the state of an external safety circuit only. The software identifies this state by using the **Emergency Stop Input Level** bit of the Drive Status. To get the software to generate an ESTOP fault when power is removed at the ESTOP input, set the ESTOP bit in the FaultMask parameter.

The ESTOP input is scaled for an input voltage of 5 - 24 volts.

**Figure 2-14: ESTOP Sense Input Schematic**

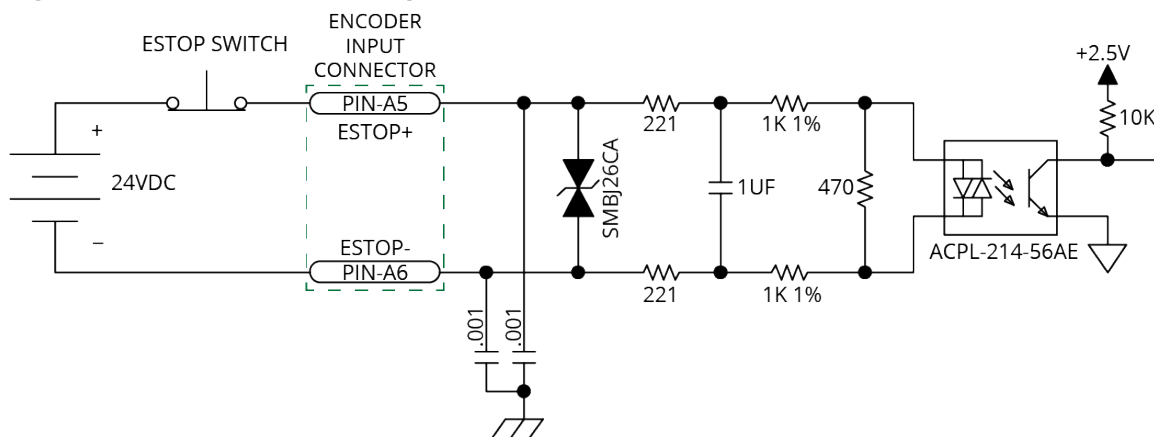

**Table 2-32: ESTOP Pins on the Encoder Input Connector**

Pin #	Label	Description	In/Out/Bi
5	ESTOP+	Emergency Stop Digital Input +	Input
6	ESTOP-	Emergency Stop Digital Input -	Input



**IMPORTANT:** If you connect the ESTOP input to a device that makes electrical noise, you must connect an electrical noise suppression device across the switched coil. Refer to [Table 2-33](#) to see the types of devices you can use.


**Table 2-33: Electrical Noise Suppression Devices**

Device	Aerotech P/N	Third Party P/N
RC (.1uf / 200 ohm) Network	EIC00240	Electrocube RG1782-8
Varistor	EID00160	Littelfuse V250LA40A

### 2.8. Laser Output Polarity Switch

The Laser Output Polarity switches are reserved for future use.

**Figure 2-15: Laser Output Polarity Switch Location**

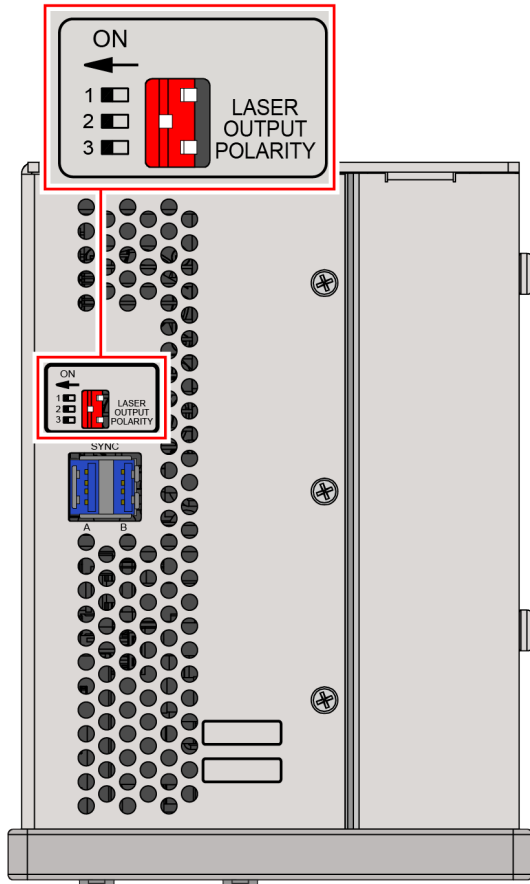

## 2.9. Sync Port

The Sync port is a bi-directional high speed proprietary interface that lets you transmit encoder signals between drives. This is typically used for multi-axis PSO applications where one or two drives send their encoder signals to a main drive that has the PSO logic and PSO output signal. The drive contains two Sync ports, labeled A and B.

To avoid signal contention, all Sync ports default to the input state during reset and immediately after power is applied to the drive.

**Table 2-34: Sync-Related Functions**

Function	Description
DriveEncoderOutputConfigureDivider(), DriveEncoderOutputConfigureInput(), DriveEncoderOutputOn(), DriveEncoderOutputOff() [A3200: ENCODER OUT command]	Configure each Sync port as an input or an output
PsoDistanceConfigureInputs() [A3200: PSOTRACK INPUT command]	Let the PSO to track the SYNC A or SYNC B port.
PsoWindowConfigureInput() [A3200: PSOWINDOW INPUT command]	

The Sync port uses low-voltage differential signaling (LVDS) and standard USB 3.0 type A (cross over) cables.

**Table 2-35: Sync Port Cables**

Part Number	Description
CBL-SYNC-3	Length 3 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-5	Length 5 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-7	Length 7 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-10	Length 10 dm; Connectors: USB Type A to USB Type A

## 2.10. PC Configuration and Operation Information

For more information about hardware requirements, PC configuration, programming, system operation, and utilities, refer to the [Help file](#).

*This page intentionally left blank.*



## Chapter 3: Maintenance



**IMPORTANT:** For your own safety and for the safety of the equipment:

- Do not remove the cover of the XL4s.
- Do not attempt to access the internal components.

A fuse that needs to be replaced indicates that there is a more serious problem with the system or setup. Contact Global Technical Support for assistance.



**DANGER:** If you must remove the covers and access any internal components be aware of the risk of electric shock.

1. Disconnect the Mains power connection.
2. Wait at least ten (10) minutes after removing the power supply before doing maintenance or an inspection. Otherwise, there is the danger of electric shock.
3. All tests must be done by an approved service technician. Voltages inside the controller and at the input and output power connections can kill you.

**Table 3-1: LED Description**

LED	Color	Description
PWR	GREEN	The light will illuminate and remain illuminated while power is applied.
EN/FLT	GREEN	The axis is Enabled.
	RED	The axis is in a Fault Condition.
	GREEN/RED (alternates)	The axis is Enabled in a Fault Condition. or The light is configured to blink for setup.

**Table 3-2: Troubleshooting**

Symptom	Possible Cause and Solution
No Communication	Make sure the power LED is illuminated (this indicates that power is present).
	Make sure that all communication cables (HyperWire, for example) are fully inserted in their ports.

### 3.1. Preventative Maintenance

Do an inspection of the XL4s and the external wiring one time each month. It might be necessary to do more frequent inspections based on:

- The operating conditions of the system.
- How you use the system.

**Table 3-3: Preventative Maintenance**

Check	Action to be Taken
Examine the chassis for hardware and parts that are damaged or loose. It is not necessary to do an internal inspection unless you think internal damage occurred.	Repair all damaged parts.
Do an inspection of the cooling vents.	Remove all material that collected in the vents.
Examine the work area to make sure there are no fluids and no electrically conductive materials.	Do not let fluids and electrically conductive material go into the chassis.
Examine all cables and connections to make sure they are correct.	Make sure that all connections are correctly attached and not loose. Replace cables that are worn. Replace all broken connectors.

### Cleaning



**DANGER:** Before you clean the XL4s, disconnect the electrical power from the drive.

Use a clean, dry, soft cloth to clean the XL4s. If necessary, use a cloth that is moist with water or isopropyl alcohol. If you use a moist cloth, make sure that moisture does not go into the drive. Also make sure that it does not go onto the outer connectors and components. Internal contamination from the cleaning solution can cause corrosion and electrical short circuits.

Do not clean the labels with a cleaning solution because it might remove the label information.

### 3.2. Board Assembly

Figure 3-1 highlights the important components located on the control board.


 **DANGER:** Before you open the XL4s chassis, you must disconnect the Mains power connection.

Figure 3-1: Control Board Assembly

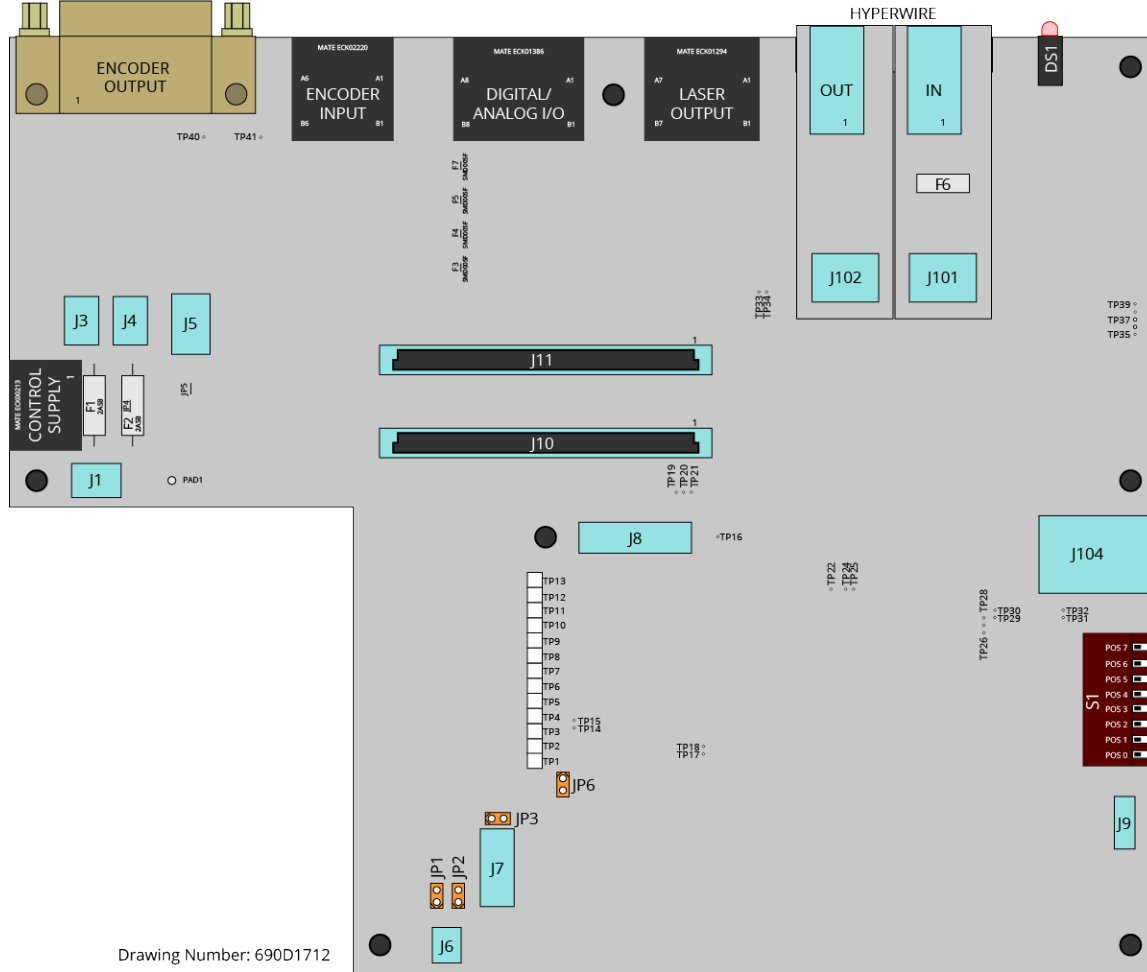


Table 3-4: Control Board Fuse Specifications


Fuse	Description	Size	Aerotech P/N	Third Party P/N
F1	Control Supply Power at Pin-1	2 A S.B.	EIF01048	Littelfuse 0875002.MXEP
F2	Control Supply Power at Pin-1	2 A S.B.	EIF01048	Littelfuse 0875002.MXEP
F6	HyperWire power	--	--	--

NOTE: F6 is a resettable fuse. It is not necessary to replace the fuse. Turn off the power and remove the short circuit.



**DANGER:** Before you open the XL4s chassis, you must disconnect the Mains power connection.

**Figure 3-2: Power Board Assembly**

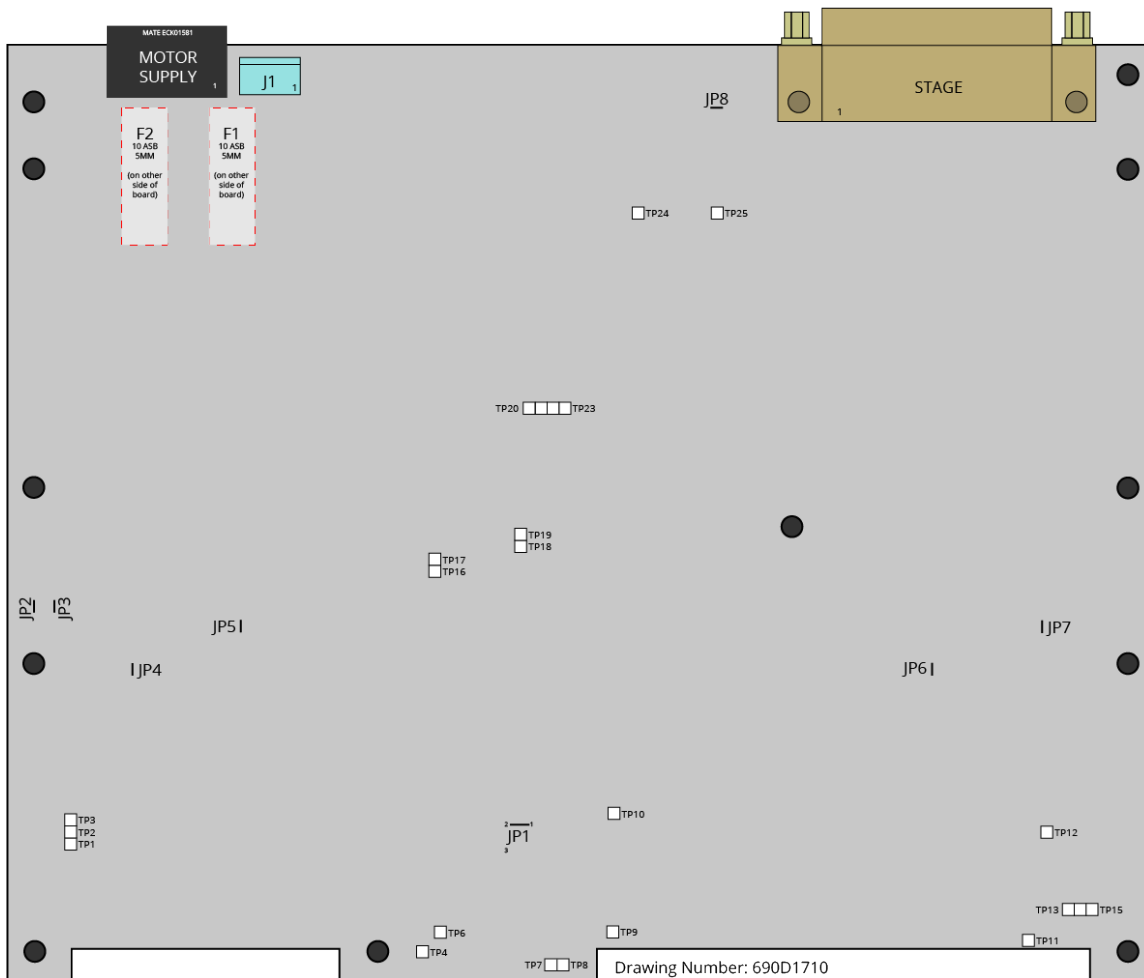

**Table 3-5: Power Board Fuse Specifications**

Fuse	Description	Size	Aerotech P/N	Third Party P/N
F1	Motor Bus Supply	10 A S.B.	EF01020	Littelfuse 215010.P
F2	Motor Bus Supply	10 A S.B.	EF01020	Littelfuse 215010.P

NOTE: F1 and F2 are on the bottom of the board.

## Appendix A: Warranty and Field Service

Aerotech, Inc. warrants its products to be free from harmful defects caused by faulty materials or poor workmanship for a minimum period of one year from date of shipment from Aerotech. Aerotech's liability is limited to replacing, repairing or issuing credit, at its option, for any products that are returned by the original purchaser during the warranty period. Aerotech makes no warranty that its products are fit for the use or purpose to which they may be put by the buyer, whether or not such use or purpose has been disclosed to Aerotech in specifications or drawings previously or subsequently provided, or whether or not Aerotech's products are specifically designed and/or manufactured for buyer's use or purpose. Aerotech's liability on any claim for loss or damage arising out of the sale, resale, or use of any of its products shall in no event exceed the selling price of the unit.

THE EXPRESS WARRANTY SET FORTH HEREIN IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE. IN NO EVENT SHALL AEROTECH BE LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES.

### Return Products Procedure

Claims for shipment damage (evident or concealed) must be filed with the carrier by the buyer. Aerotech must be notified within thirty (30) days of shipment of incorrect material. No product may be returned, whether in warranty or out of warranty, without first obtaining approval from Aerotech. No credit will be given nor repairs made for products returned without such approval. A "Return Materials Authorization (RMA)" number must accompany any returned product(s). The RMA number may be obtained by calling an Aerotech service center or by submitting the appropriate request available on our website ([www.aerotech.com](http://www.aerotech.com)). Products must be returned, prepaid, to an Aerotech service center (no C.O.D. or Collect Freight accepted). The status of any product returned later than thirty (30) days after the issuance of a return authorization number will be subject to review.

Visit [Global Technical Support Portal](#) for the location of your nearest Aerotech Service center.

### Returned Product Warranty Determination

After Aerotech's examination, warranty or out-of-warranty status will be determined. If upon Aerotech's examination a warranted defect exists, then the product(s) will be repaired at no charge and shipped, prepaid, back to the buyer. If the buyer desires an expedited method of return, the product(s) will be shipped collect. Warranty repairs do not extend the original warranty period.

**Fixed Fee Repairs** - Products having fixed-fee pricing will require a valid purchase order or credit card particulars before any service work can begin.

**All Other Repairs** - After Aerotech's evaluation, the buyer shall be notified of the repair cost. At such time the buyer must issue a valid purchase order to cover the cost of the repair and freight, or authorize the product(s) to be shipped back as is, at the buyer's expense. Failure to obtain a purchase order number or approval within thirty (30) days of notification will result in the product(s) being returned as is, at the buyer's expense.

Repair work is warranted for ninety (90) days from date of shipment. Replacement components are warranted for one year from date of shipment.

### Rush Service

At times, the buyer may desire to expedite a repair. Regardless of warranty or out-of-warranty status, the buyer must issue a valid purchase order to cover the added rush service cost. Rush service is subject to Aerotech's approval.

### On-site Warranty Repair

If an Aerotech product cannot be made functional by telephone assistance or by sending and having the customer install replacement parts, and cannot be returned to the Aerotech service center for repair, and if Aerotech determines the problem could be warranty-related, then the following policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs. For warranty field repairs, the customer will not be charged for the cost of labor and material. If service is rendered at times other than normal work periods, then special rates apply.

If during the on-site repair it is determined the problem is not warranty related, then the terms and conditions stated in the following "On-Site Non-Warranty Repair" section apply.

### On-site Non-Warranty Repair

If any Aerotech product cannot be made functional by telephone assistance or purchased replacement parts, and cannot be returned to the Aerotech service center for repair, then the following field service policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs and the prevailing labor cost, including travel time, necessary to complete the repair.

### Service Locations

<http://www.aerotech.com/contact-sales.aspx?mapState=showMap>

#### **USA, CANADA, MEXICO**

Aerotech, Inc.  
Global Headquarters

#### **CHINA**

Aerotech China  
Full-Service Subsidiary

#### **GERMANY**

Aerotech Germany  
Full-Service Subsidiary

#### **TAIWAN**

Aerotech Taiwan  
Full-Service Subsidiary

#### **UNITED KINGDOM**

Aerotech United Kingdom  
Full-Service Subsidiary

## Appendix B: Revision History

Revision	Description
2.02	General Update
2.01	The following sections have been updated: <ul style="list-style-type: none"><li>• <a href="#">EU Declaration of Conformity</a></li><li>• <a href="#">Agency Approvals</a></li></ul>
2.00	General Update
1.04	Updated <a href="#">Section 1.2</a> .
1.03	Updated <a href="#">Table 1-1</a>
1.02	Updated to AUTOMATION1 hardware
1.01	Added <a href="#">Table 2-13</a>
1.00	New Manual

*This page intentionally left blank.*



# Index

	<b>2</b>			
2011/65/EU		7	Control Supply Connections	19
2014/35/EU		7	Control Supply Connector	19
			Mating Connector Part Numbers	19
			Wiring Specifications	19
			cooling vents, inspecting	42
			Customer order number	11
	<b>A</b>		<b>D</b>	
Agency Approvals		8	Declaration of Conformity	7
Altitude		18	Digital / Analog I/O Connectors	
Ambient Temperature		18	Analog Inputs (Differential)	34
Analog Encoder Input Specifications		28	Mating Connector Part Numbers	29
Analog Encoder Inputs		28	Digital and Analog I/O Connector	
Analog Input Pins on the Digital / Analog I/O B Connector		34	Analog Outputs	33
Analog Input Specifications (Digital / Analog I/O B Connector)		34	Digital Inputs	32
Analog Inputs (Digital / Analog I/O B Connector)		34	Digital Outputs	30
Analog Inputs Schematic		34	Digital and Analog I/O Connector A Pinout	29
Analog Output Pins on the Digital / Analog I/O B Connector		33	Digital and Analog I/O Connector B Pinout	29
Analog Output Specifications (Digital and Analog I/O Connector)		33	Digital and Analog I/O Connectors	29
Analog Outputs (Digital and Analog I/O Connector)		33	Digital Input Pins (Digital/Analog I/O B Connector)	32
Analog Outputs Schematic		33	Digital Input Specifications	32
	<b>B</b>		Digital Inputs (Digital and Analog I/O Connector)	32
Board Assembly		43	Digital Inputs Connected to Current Sinking Devices	32
	<b>C</b>		Digital Inputs Connected to Current Sourcing Devices	32
Cables			Digital Output Pins (Digital/Analog I/O A Connector)	30
HyperWire		23	Digital Output Specifications	30
Sync Port		39	Digital Outputs (Digital and Analog I/O Connector)	30
cables, examining		42	Digital Outputs Connected in Current Sinking Mode	31
Check for fluids or electrically conductive material exposure		42	Digital Outputs Connected in Current Sourcing Mode	31
Cleaning		42	Dimensions	17
Commands			Drawing number	11
Sync		39	Drive and Software Compatibility	18
connections, examining		42		<b>E</b>
Continuous Output Current		15	Electrical Noise Suppression Devices	37
Control and Motor Power Wiring using a TM3 Transformer		22	Electrical Specifications	15
Control Board Assembly		43	EMC/CE Compliance	22
Control Board Fuse Specifications		43	Emergency Stop Sense Input	37
Control Supply		15	Enclosure	16
			Encoder Input Connector	35
			Mating Connector Part Numbers	35
			Encoder Input Connector A Pinout	35
			Encoder Input Connector B Pinout	35
			Encoder Input Connector Encoder Connections	36

Encoder Input Connector Specifications	35	HyperWire	23
Encoder Output Connector	25	Cable Part Numbers	23
Encoder Output Connector Mating		Card Part Number	23
Connector Part Numbers	25		
Encoder Output Connector Pinout	25	<b>I</b>	
Encoder Outputs Schematic	25	Input Power Connections	19
Environmental Specifications	18	inspecting cooling vents	42
ESTOP	37	Inspection	42
ESTOP Pins on the Encoder Input Connector	37	Installation and Configuration	19
ESTOP Sense Input Schematic (Encoder Input Connector)	37	Installation Connection Overview	12
EU 2015/863	7	Installation Overview	12
examining parts		Introduction	13
cables	42	IP54 Compliant	16
connections	42		
examining, dangerous fluids	42	<b>L</b>	
examining, dangerous material	42	Laser Output Polarity Switch	38
External Power Supply Options	21		
		<b>M</b>	
<b>F</b>		Maintenance	41
Feature Summary	13	material, electrically conductive	42
Figure		Mating Connector P/N	
Analog Inputs Schematic	34	Control Supply Connector	19
Analog Outputs Schematic	33	Digital / Analog I/O Connectors	29
Control Board Assembly	43	Encoder Input Connector	35
Control Supply Connections	19	Encoder Output Connector	25
Digital Inputs Connected to Current Sinking Devices	32	Motor Supply Connector	20
Digital Inputs Connected to Current Sourcing Devices	32	PSO Connectors	24
Digital Outputs Connected in Current Sinking Mode	31	Stage Motor and Feedback Connector	27
Digital Outputs Connected in Current Sourcing Mode	31	Mechanical Specifications	16
Dimensions	17	Minimizing Conducted, Radiated, and System Noise for EMC/CE Compliance	22
Encoder Input Connector Encoder Connections	36	Minimum Load Resistance	15
Encoder Outputs Schematic	25	Motor Supply	15
ESTOP Sense Input Schematic	37	Motor Supply Connections	20
Motor Supply Connections	20	Motor Supply Connector	20
Power Board Assembly	44	Mating Connector Part Numbers	20
PSO External Sync Input Schematic	26	Motor Supply Wiring Specifications	20
Third-Party Power Supply Connection	21-22	Mounting and Cooling	16
TM3 Transformer Control and Power Wiring	22	Mounting Hardware	16
fluids, dangerous	42	Mounting Orientation	16
Functional Diagram	14		
		<b>O</b>	
<b>H</b>		Operation	18
Handling	11		
Humidity	18		

Output Voltage	15	Specifications	
Overview	13	Analog Encoder Input	28
		Analog Input (Digital / Analog I/O B Connector)	34
		Analog Output (Digital and Analog I/O Connector)	33
		Control Board Fuses	43
		Control Supply Connector Wiring	19
		Digital Inputs	32
		Digital Outputs	30
		Encoder Input Connector	35
		Motor Supply Wiring	20
		Power Board Fuses	44
		PSO	24
		Unit Weight	16
		Stage Motor and Feedback Connector	27
		Mating Connector Part Numbers	27
		Stage Motor and Feedback Connector Pinout	27
		Standard Features	13
		Storage	11
		Sync-Related Commands	39
		Sync Port Cables	39
		Sync Ports	39
		System part number	11
		<b>T</b>	
		Table of Contents	3
		Third-Party Power Supply Connection	21
		TM3 Transformer Control and Power Wiring	22
		<b>U</b>	
		Unit Weight	16
		Unpacking the Chassis	12
		Use	18
		User Power Supply Output	15
		<b>W</b>	
		Warranty and Field Service	45
		<b>R</b>	
Revision History	47		
		<b>S</b>	
Safety Procedures and Warnings	9		
serial number	11		

*This page intentionally left blank.*