MOTION CONTROLLERS ENSEMBLE DRIVE-BASED



Power and Flexibility in a Drive-Based Controller

The power of the Ensemble drive-based motion controller comes from both its powerful features and its flexibility.

The Ensemble controller is powerful. We develop our own controller technology from the ground up, allowing us to deliver an automation product that is centered around precision. This approach gives our products a new level of performance, especially when compared to products from other automation providers.

The Ensemble's multi-axis coordination and precision often provide a new and rewarding experience for those used to coordinating several single-axis drives from a central processor (such as a PLC).

By using the multi-axis Ensemble controller while programming in the AeroBasic language, unique multi-axis functionality and performance is available, and this is very meaningful to the control of your machine.

The Ensemble controller executes programs that include Aerotech's Position Synchronized Output (PSO) distance-based process triggering, gearing, advanced data collection, file access, analog and digital I/O control, as well as standard program flow and mathematical concepts.

Powerful servo control on the Ensemble can be executed at up to 20 kHz and this power is deployed with flexibility. The Ensemble is powerful enough to take on complete machine control. It can also live as an embedded motion controller, subservient to a higher level machine controller. Combined with powerful software tools, the Ensemble controller excels in simple testing and development motion control applications and is robust enough for production environments.

Powerful Multi-Axis Trajectory Generation

At the heart of the controller is the ability to translate commands into the industry's best trajectory. Our controller includes the Aerotech motion engine — a powerful piece of technology that differentiates Aerotech control from other motion providers. This technology translates your program into a multi-axis, synchronized, and coordinated trajectory that is sent out over the AeroNet Ethernet bus.

The AeroNet bus connects the Ensemble controller to up to

- PRODUCT HIGHLIGHTS —

Drive-based motion controller - part of the Ensemble platform

Powerful controller operates side-by-side on a motor drive, eliminating the need for additional hardware

Connects to and synchronizes the motion trajectory and I/O of up to 10 drives over the AeroNet digital motion bus

Multiple 10-axis systems can be controlled by a single PC via Ethernet or USB

Delivers productivity and quality through combined motion and process control

Executes real-time application code developed in the Ensemble Motion Composer Suite

Directly programmable through the .NET, C, C++, MATLAB, and LabVIEW libraries

Controller data is accessible to SCADA and MES control systems via libraries

10 axes of motion control. Servomotors, piezos, voice coil, and stepper motor drive hardware can be connected on the AeroNet bus.

Advanced trajectory features include:

- Point-to-point (PT, PV, PVT)
- Target position and target velocity
- · Linear, circular, and freerun
- · Digital gearing with optional auxiliary encoder input
- Cubic spline curve-fitting
- · Velocity profiling
- · Backlash compensation
- 1D and 2D error compensation
- Advanced queuing and deferred execution features for simultaneous command execution

Motion Plus Animation

Modern machines do more than move a process tool. Many sensors and feedback devices need to come together in a larger control scheme.

The Ensemble controller, which runs on motor drive hardware, contains expandable I/O. The controller also connects to several other drives with expandable I/O. A simple four-axis Ensemble solution could have over 200 I/O points. Using the AeroBasic language, logic and control algorithms are easily programmed based on the state of I/O.

Ethernet and RS-232 Support

Ensemble drive hardware includes both Ethernet and RS-232 communication ports. These ports allow greater expandability of your automation solution — beyond the I/O available on the drives.

Modbus

The Ethernet port is configurable for Modbus communications. Class 1, Class 2, and part of Class 3 of the OpenModbus/ TCP specifications are supported. While the Ensemble always functions as Modbus/TCP slave, it can also act as a Modbus/ TCP master when enabled, thus acting as a master and slave at the same time. Several blocks of Modbus registers are used to exchange data between the master and slave devices.

Aerotech includes standard procedures in its help files for integrating both WAGO and AutomationDirect devices over Modbus.

EtherNet/IP

Aerotech offers an Ensemble EtherNet/IP[™] option that communicates with Aerotech Ensemble drives and the various ODVA Common Industrial Protocol (CIP[™]) objects that are used. The Ensemble supports a Generic EtherNet/IP I/O interface by using Class 1 (implicit messaging) communications.

EPICS Compatible

Aerotech's Ensemble controller is compatible with EPICS. Motor records are available from Argonne National Lab. Use your existing EPICS interface to control the most advanced motion controller in the industry.

TANGO Compatible

Aerotech's Ensemble controller is compatible with TANGO environments. The TANGO Device Server is available on Sourceforge.net. Use the industry's most advanced motion controller in your existing TANGO environment.

Flexible, High-Performance System Architecture

Our controller enables high performance by managing a distributed control architecture. Whereas centralized control architectures close the servo and current loops on a central controller, the Ensemble Platform closes the position, velocity, and current loops on each individual Ensemble drive, avoiding processing bottlenecks. Trajectory generation is done on a single drive. This controller executes programs and sends the position commands to the Ensemble drives via the AeroNet network.

Motion Composer Suite Engineering Software

Aerotech's Ensemble Motion Composer Suite is a feature-rich engineering software package. This software allows each member of your design team to contribute in setting up the controller and motion to your application's requirements.

Simply connect to the controller using the Motion Composer Suite. Then use several user-friendly tools to set up each control loop on each drive and also set up controller-specific parameters.

Programming for Performance

The Ensemble Motion Composer Suite includes the Motion Composer IDE — a feature-rich programming environment for developing real-time application code. The Motion Composer IDE allows you to quickly build, debug, load, and run real-time application code on the controller.

Programming Libraries Extend Functionality

When your goal is to deploy a custom user experience or access data from your drive, the Ensemble controller enables many paths to success. Standard programming libraries for .NET, C, and C++ are included with the controller. A simple REST web interface is also included.

If you are developing MATLAB or LabVIEW applications, support for each product is available.

No matter how you want to approach your precision motion control application, the Ensemble controller helps you to succeed.

System Setup with the A3200 Software-Based Machine Controller

The center of a powerful setup experience is the controller. Not only do you use the development environment to set up the controller parameters, you also connect to the network of drives through your controller. This enables the controller, fieldbus support, and all the drives in the control system to be set up simultaneously and with a single parameter file.



Programming Libraries

.NET, C, and C++ Libraries Plus REST Interface

Aerotech's standard controllers are flexible enough to handle almost any control application. From simple motion to coordinating and synchronizing the motion of multiple axes in your machine, Aerotech automation controllers provide the flexibility and power required for today's automation challenges, and it is all accessible through powerful programming libraries.

MATLAB[®] Library and LabVIEW[®] VIs

Users who program in MATLAB and LabVIEW can benefit from Aerotech's powerful automation tools. Integrate into your native environment with well-documented libraries.

.NET Library - Fully Functional for Developers

The A3200 .NET library is made accessible to our customers in the same structure and format that we use to develop our own applications. Therefore, developers should never worry that using our API will somehow reduce the capabilities of their own products or developments.

Some of the high-level functionality available in our APIs include:

Functionality	Description
Connect	Connect to one or several controllers
Configure	Configure settings, set/retrieve controller and drive parameters, tune motors and encoders, and load drive firmware
Execute Commands	Execute AeroBasic commands in .NET
Program Files	Compile AeroBasic programs, get build errors, load and run AeroBasic programs on the controller, and handle the controller tasks that run AeroBasic programs
Communicate	Setup and command drive and controller communication ports and protocols
Monitor Status	Get status and monitor information coming from the controller
Collect Data	Collect data on the controller in real time; exposes functionality used by the Digital Scope

Accessing Data with the Ensemble Drive-Based Motion Controller

Accessing data from your controller is simple. The Ensemble controller allows fast and easy access to data: through both the Ensemble Motion Composer Suite and through the APIs.

Through the Motion Composer Suite

More than 30 axis status items are available for each controller axis, and 10 task state items are available for each controller task.


Through the API

These same signals are available for collection and analysis through industry-standard tools using the programming APIs.

Machine Performance with the A3200 Software-Based Machine Controller


Once set up and ready to go, the system performs. The Ensemble controller contains a long list of standard controller capabilities as well as advanced powerful controller capabilities.


These features are all easy to access with the powerful Motion Composer Suite software and controller APIs.

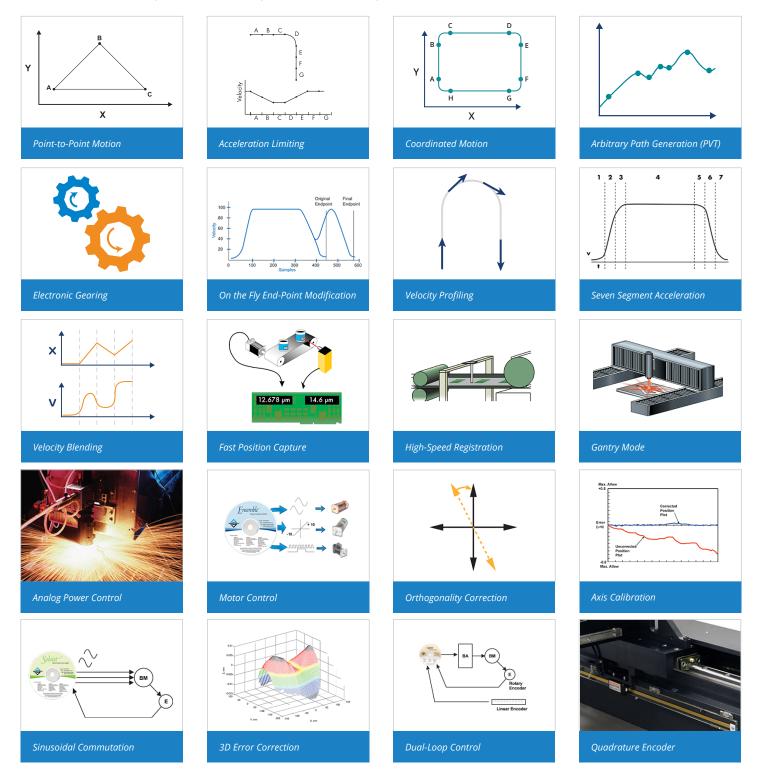




Analog Feedback

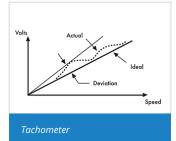

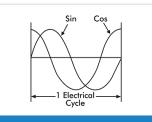




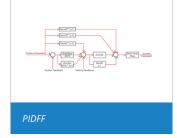




Laser Interferometer





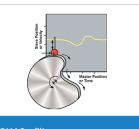

CAM Profiling



Harmonic Cancellation Eliminate effects of periodic disturbances

Improve throughput with flexible payloads

Command Shaping



Dynamic Gain Scheduling Automatically adjust servo gains based on changing conditions



Trigger I/O based on position feedback with




EasyTune Tune your system like a motion control expert



Motion Designer Graphically generate and edit motion profiles








Enhanced Tracking Control Improve dynamic tracking performance

Ensemble Drive-Based Motion Controller **Specifications**

Specification	Description	
Axes	10 axes available	
Programming Tasks	5 tasks available	
Position Modes	Absolute, incremental, dynamic trajectory correction	
Coordinated Motion Types	Coordinated Synchronous Motion Coordinated motion refers to moves that follow a well-defined path in space. Coordinated moves start and stop axes at the same time. They can execute in velocity profiling mode. • Linear motion • Clockwise and counterclockwise • Bezier • Cubic-spline curve fitting CNC Option: RS-274 standard G-code motion including linear, circular, helical, and spherical interpolation, cutter compensation, normalcy, parts rotation, mirroring, path retrace, polar transformations and cylindrical transformations, scaling.	
Independent Motion Types	 Non-Coordinated Synchronous Motion Non-coordinated motion refers to moves in which axes start at the same time but do not necessarily end at the same time. Each axis moves at its own velocity specified in the command or by axis parameters. Program execution does not continue to the next line until all axes in the move command have completed motion. Homing Multiple procedures are available in order to establish the home position of an axis: 	
Planes and Tasks	In the Ensemble, there are programmable planes such that multiple tasks can use the same queue. It can also be configured so that tasks can use different queues — either as a way of separating axis groups by task, or as a way to generate simultaneous motion on the same axes from different tasks. • Plane: a coordinate system and motion queue • Task: a space in which a program is executed. • Queue: a lineup of motion commands waiting in order to be executed Why use Planes? • Synchronization: synchronize the motion between two user tasks, such as executing two linear moves from two different tasks. Using the same plane for motion in both tasks ensures that one motion segment will finish before the next starts. • Axis Separation: Multiple planes can be used to separate motion on different axes so that the axes can be run simultaneously. • Cumulative Motion: Multiple planes can also be used to create motion on the same axes from different user tasks and combine the motion profiles to form the axis position.	
Acceleration Profiles	 S-curve: Trapezoidal acceleration applied resulting in an "s-curve" velocity profile SCURVE = 0: a constant acceleration applied resulting in linear velocity profile SCURVE between 0 and 99: a trapezoidal acceleration applied resulting in an "s-curve" velocity profile SCURVE = 100: a triangular acceleration applied resulting in an "s-curve" velocity profile Acceleration Modes Time based: axis acceleration takes place over a specified time Rate based: axis acceleration takes place over a specified distance 	

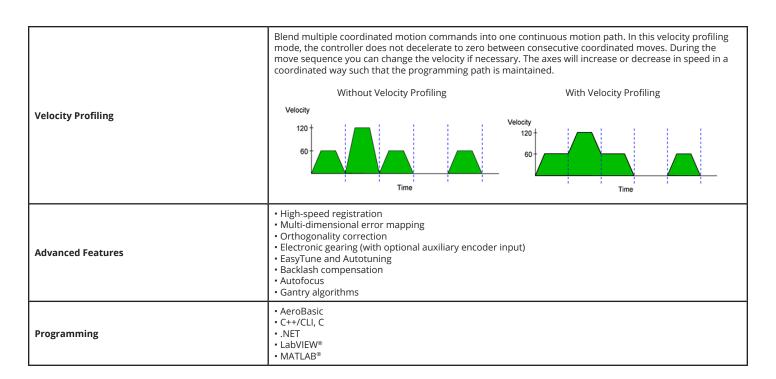

Ensemble Software License Specifications

Option	Configuration	Description
		Full installation of the Ensemble Motion Composer Suite and unlocks certain features on the Ensemble drive-based controllers
		Pricing is summation of selected products. Maintenance (software update) included in price for one year from date of purchase.
		The Ensemble Motion Composer Suite is intended for deployment on desktop or industrial PCs
Ensemble	Order Entry Point	Includes: • Ensemble Configuration Manager • Ensemble Motion Composer IDE • Ensemble Digital Scope • Ensemble Console • Ensemble Firmware Loader • Ensemble Help • Programming Help
		The Ensemble is not multilingual and cannot be used in applications that require a native-language user interface
		Contains both the Ensemble Motion Composer Suite and options that enable features on an Ensemble Drive-Based Controller
License	Machine	 Provides the ability to: Write, compile, execute, debug programs in AeroBasic Full access to .NET, C, and C++ libraries Access full diagnostics, fault, and status information Access and set I/O, registers, and variables Collect, analyze, and save data View files from machine for analysis and record keeping Connect PC to machine through Ethernet TCP/IP or USB Upgrades can be installed (firmware or controller) using loader
	Machine Upgrade	 Use to change configuration options on an existing machine license Requires the current license ID from customer Price is based on the new options added Maintenance extension is a separate line item
	Machine Addition	Increases the number of licenses associated with an existing key
	License Extension	 Extends the maintenance period on an existing license Can be purchased in yearly increments
	Media Only	License ID distributed on the specified media

Ensemble Drive-Based Motion Controller Ordering Options and Details

Option	Details
	Contains a collection of controller-level algorithms that are designed to improve machine positioning, increase throughput, and reduce cycle times. Parameters supplied in the toolbox are used to configure these algorithms.
Dynamic Controls Toolbox	Dynamic and Threshold Gain Scheduling Adjusts the servo-loop gains based on a specific input. These algorithms can improve position performance and reduce cycle times.
	Harmonic Cancellation Improves performance by reducing the tracking error to sinusoidal reference commands, motor force ripple or other position-dependent disturbances, and cross-axis disturbances such as that created in a linear axis by an unbalanced rotational axis.
	Command Shaping Filters undesired frequencies from the commanded position, velocity, and acceleration.
	Cross-Axis Feedforward Minimizes off-axis position errors by splitting the current generated by the feedforward gains between multiple motors on different axes.
Enhanced Throughput Module	The Enhanced Throughput Module (ETM) can improve machine throughput by measuring base or frame vibration directly and using this information in the servo control algorithm.
Enhanced Tracking Control	Enhanced Tracking Control (ETC) improves move-and-settle times in point-to-point positioning and decreases tracking errors that occur during contoured motion. The ETC is a control algorithm that works with a conventional Proportional-Integral-Derivative (PID) servo loop and increases the ability of the servo mechanism to reject low-frequency disturbances that can cause position errors. Examples of low-frequency disturbances include friction, isolation table movement, and cable management. Use ETC only with stages that have a high encoder resolution.

Allen-Bradley EtherNet/IP Interface to Aerotech Ensemble

The Aerotech Ethernet/IP interface enables AB PLCs (MicroLogix, CompactLogix, and ControlLogix) to integrate directly with the Ensemble motion control solutions. Motion can be directly programmed in the RSLogix 5000 environment or separate programs can be written on the controller and triggered from the AB PLC. Aerotech has two Ethernet/IP interfaces: ASCII and Register. Choose the PLC, motion controller, and Ethernet/IP interface that best fits your application needs.

The Allen-Bradley code snippets provided here are written in the graphical "relay ladder logic" syntax. Allen-Bradley also supports function block and structured text programming languages.

ASCII Command Interface

The ASCII command interface can be used to send ASCII text strings to the Ensemble and perform a set of actions such as commanding motion or retrieving diagnostic information. Our vendor-specific EtherNet/IP ASCII command interface object extends this functionality across EtherNet/IP.

The power of the ASCII command interface lies in its simplicity and ease of use. A text string is formed using an AeroBASIC[™] command, followed by an End-Of-String (EOS) character. ASCII response data indicates whether or not the command was successfully executed. An ACK character is sent to indicate success, an NAK character is sent if there is a command error, and a FAULT character is sent if there is a task error. For commands that expect return data, the response character is followed by the return data, which is terminated by the EOS character. The EOS, ACK, NAK, and FAULT characters are configurable via Ensemble drive parameters.

To send the ASCII command from the PLC (programmed using Rockwell RSLogix) to the Ensemble, an MSG block is used (Figure 1). The EtherNet/IP message can be easily configured from within the RSLogix software as shown in Figure 2.

Send_ASCII_Command Message Message Control	MSG ASCII_Interface_Message
Figure 1. Allen-Bradley code snippet (i	Ladder Logic) for ASCII interface.
Message Configuration - ASCII_Interface_A	Message 🗔 🔀
Configuration Communication Tag	
Message <u>Type:</u> CIP Generic	
Service Custom Type: Service 32 (Hex) Class: 64 (Hex) Instance: 1 Attribute: 0 (Hex)	Source Element: ASCII_Text_String Source Lgngth: 9 (Bytes) Destination New Tag
Enable Enable Enable Error Code: Error Path: Error Text:	⊛ Done Done Length: 6 ☐ Timed Out ←
OK	Cancel <u>Apply</u> Help
Figure 2. The value of the RSLogix tag Ensemble.	in the red box will be sent to the

ASCII_Text_String (specified in the red box in Figure 2) is an RSLogix "tag". The value of this tag is the ASCII command that will be sent to the Ensemble. The example in Figure 3 shows the command "HOME X Y" as it would be configured in RSLogix.

ASCII_Interface_Message	()	{}		MESSAG
ASCII_Text_String	'HOME X Y41'	()		STRING
Send ASDI Command	0		Decimal	800L

When the MSG block is activated, the ASCII command is sent to the Ensemble via the EtherNet/IP protocol. The Destination field of the message configuration can be used to specify a local tag for the ASCII command's return data.

Ensemble Code Snippet (AeroBASIC) for ASCII Interface

For this interface (see Figure 4), the user does not need to write any AeroBASIC code on the Ensemble. The Ensemble automatically receives and processes the commands. This functionality is built into our EtherNet/IP module.

Send_Register_Message] [Message Message Control	MSG Register_Interface_Message (EN) (DN) (ER)
Figure A Allen Pradley of	da spippat (La	Ider Logic) for Pagistar interface

Register Interface

Our vendor-specific EtherNet/IP register interface object allows the Ensemble's built-in integer and double registers to be accessed via EtherNet/IP. This provides a flexible, generalpurpose interface to the Ensemble that can be adapted to many different applications. Data consistency is guaranteed internally, so there is no need for concern when accessing these registers simultaneously via EtherNet/IP and AeroBASIC programs on the controller.

The Rockwell software is configured in very much the same way as the ASCII command interface. In this case, the message source (shown in red in Figure 5) is a data array. The message configuration in Figure 5 is for the "Write Single Register" service. That service requires two pieces of data: the number of the register to write, and the value to be written. Therefore, we configure the message source tag as shown in Figure 6.

Message Configuration - Register_Interface	_Message 🛛 🔁 🔀
Configuration Communication Tag	
Message <u>Type:</u> CIP Generic	T
Service Custom Type: Service 33 (Hex) Class: 65 (Hex) Code: Instance: 1 Attribute: 0 (Hex)	Source Element: Source Length: Destination Ne <u>w</u> Tag
Enable Enable Waiting Start	Done Done Length: 0
Error Code: Extended Error Code: Error Path: Error Text:	☐ Timed Out ←
OK	Cancel Apply Help
Figure 5. Allen-Bradley code snippet (L	adder Logic) for Register interface.

The value 100 is the register to write to, and the value to be written is 7. When the MSG block is activated, the register query is sent to the Ensemble via the EtherNet/IP protocol.

+ Register_Interface_Message	()	()	MESSAG
Register_Serv_Data	the state of the s	() Decimal	INT[3]
+ Register_Serv_Data[0]	100	Decimal	INT
+ Register_Serv_Data[1]	7	Decimal	INT
+ Register_Serv_Data(2)	0	Decimal	INT
Send Register Message		Decimal	BOOL

Figure 6. Allen-Bradley code snippet (Ladder Logic) for Register interface.

As you can see, this is a straightforward data interface from the PLC to the Ensemble. In addition to writing a single register, the interface also supports writing multiple registers in one message and reading single or multiple registers. This example was interfacing with an integer (32-bit) register, but the interface supports the same functionality with double-precision (64-bit) floating point values.

Ensemble Code Snippet (AeroBASIC) for Register Interface

To make use of the data that is being transferred to and from the PLC, the user can write an AeroBASIC program to respond to incoming register transfers, as well as write outbound register data. This combination of EtherNet/IP communication with the power and flexibility of AeroBASIC allows for the implementation of many unique applications. For example, the following AeroBASIC code snippet shows how the register interface can be used to control the Ensemble timebase value (set by the AeroBASIC TimeScale command).

HEADER

' The PLC writes timebase values to IntegerRegister 101 Define timebaseRegisterIndex 101

END HEADER

' Declare a global variable named "timebase" Global timebase as Integer

END DECLARATIONS

PROGRAM

' initialize the timebase register to 100% speed RegS IntegerRegisters, timebaseRegisterIndex, 100

' ... do work in AeroBASIC ...

' Change timebase to value sent from PLC Call GetTimebase() TimeScale timebase

'... continue working ...

END PROGRAM

FUNCTION GetTimebase() as void

' Read the value from IntegerRegister 101 into the variable "timebase" timebase = RegS(IntegerRegisters, timebaseRegisterIndex)

END FUNCTION

Ensemble Drive-Based Motion Controller Ordering Information

Ensemble

nsemble	Ensemble Motion Composer Suite	
License Options		
License		
-Machine	Ensemble software installation on a single PC	
-Machine upgrade	Ensemble software configuration change of license	
-Machine addition	Ensemble software increase license count for existing key	
-License extension	Ensemble software extend maintenance period of license	
-Media only	Ensemble software distribute current license on media	
Media		
-Download	Installation media provided for download only	
-USB	Installation media provided on a USB drive	
-CD	Installation media provided on compact disk	
Version		
-Default	Current version of software/controller	
-Legacy	Legacy version of software/controller	
Maintenance		
-Maintenance-X-00	Software/controller maintenance for x year(s) after purchase where X is one through seven. One ye is default.	

Software-Based Controller Configuration

Dynamic Controls Toolbox	
-Dynamic Controls Toolbox	Aerotech Advanced Controls
Enhanced Throughput Module	
-Enhanced Throughput Module	Setup and monitoring screens for ETM modules
Enhanced Tracking Control	
-Enhanced Tracking Control	Reduced dynamic following error and settling times
EtherNet/IP	
-EtherNet/IP	EtherNet/IP class 1 I/O, ASCII command, and register interface objects
Motion Designer	
-Motion Designer	Trajectory creation and evaluation software
LabVIEW	
-LabVIEW	Includes LabVIEW 2010 (forward compatible) VI samples
MATLAB Libraries	
-MATLAB	MATLAB library for motion, parameters, and data collection
nsemble Controller Conne	ection Cable (Items Ordered Separately)

PC to Ensemble Drive/Controller Cable

ENET-XOVER-xx	Ethernet crossover cable (available in length xx where xx = 9, 15, 30, 45, 60, 75, or 150 dm)
USB-AMBM-xx	USB A-Male to B-Male cable (available in length xx where xx = 5, 10, 30, 50, or 200 dm)
-MATLAB	MATLAB library for motion, parameters and data collection

AeroNet Communication Network (Items Ordered Separately)

Ensemble Drive-to-Drive Cable

ENET-CAT6-xx

Shielded Ethernet CAT6 cable (available in length xx where xx = 3, 6, 10, 20, 30, 45, 76, or 90 dm)

Remote Server	
-Remote	Co

Configure A3200 as server

Motion Composer Suite Add-Ons

-CNC Operator Interface	HMI CNC software for Windows. Includes the CNC option.
Motion Designer	
-Motion Designer	Trajectory creation and evaluation software
Motion Simulator	
-Motion Simulator	Trajectory simulation, creation, and evaluation software
LabVIEW	
-LabVIEW	Includes LabVIEW 2010 (forward compatible) VI samples
MATLAB Libraries	
-MATLAB	MATLAB library for motion, parameters and data collection

FireWire Communication Network (Items Ordered Separately)

NFire-PCle NFire-PCle FireWire communication network PCIe card (recommended) NFire-PCI NFire-PCI FireWire communication network PCI card NConnect-6P6P-xx* NConnect-6P6P-45 FireWire cable (4.50 meter length), 6P to 6P NConnect-6P6P-30 FireWire cable (3.00 meter length), 6P to 6P NConnect-6P6P-18 FireWire cable (1.80 meter length), 6P to 6P FireWire cable (0.90 meter length), 6P to 6P NConnect-6P6P-9 NConnect-6P6P-5 FireWire cable (0.50 meter length), 6P to 6P NConnect-6P6P-2.3 FireWire cable (0.23 meter length), 6P to 6P

*Note: Aerotech strongly recommends the use of FireWire cables supplied by Aerotech (NCONNECT cables). These cables are tested to ensure proper performance. A single open PCI or PCIe card slot is required to accommodate the required FireWire PCI or PCIe card for Aerotech's motion bus.

HyperWire Communication Network (Items Ordered Separately)

HyperWire-PCle	
NFire-PCIe	Firewire communication network PCIe card (recommended)
HyperWire-AO10-xx	
HyperWire-AO10-200	HyperWire cable (20.0 meter length), SFP to SFP
HyperWire-AO10-50	HyperWire cable (5.0 meter length), SFP to SFP
HyperWire-AO10-30	HyperWire cable (3.0 meter length), SFP to SFP
HyperWire-AO10-10	HyperWire cable (1.0 meter length), SFP to SFP
HyperWire-AO10-5	HyperWire cable (0.5 meter length), SFP to SFP